




COWAY LOVES THE PLANET
This paper can be recycled.

TH

COWAY

Water Purifier CHP-6200N (TH)

- This product cannot be used if the voltage is different from that mentioned in the rating plate.
- For your safety and proper use of the product, please read this user manual before use.

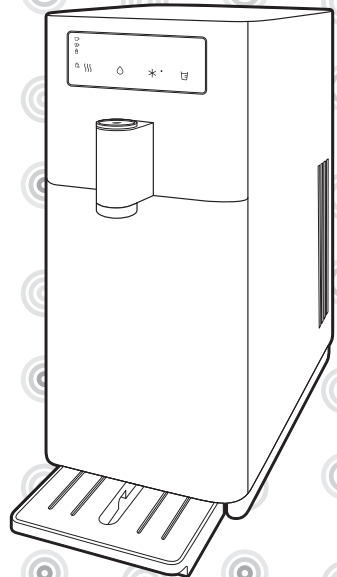


FEATURES

1

Direct water purification system


Nanotrap™ Filter removes particulates in drinking water, waterborne microorganisms, bacteria and virus. Plus Inno-Sense Filter(D) improves the taste of water by removing pollutants, such as odor-causing substances, soluble contaminant, chlorine and volatile organic compounds (VOC's). Direct water purification system has been applied for more hygienic use.

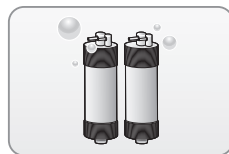

2

Electronic Cooling System


Our cooling system does not use a coolant and is an environmental friendly water purifier. In addition, as the unit uses an electrical based cooling function, external noise is reduced.

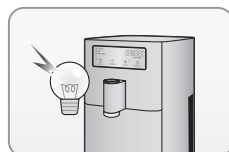

3

Easy Filter Replacement

Unlike the existing difficult water purifier filter replacement method that takes a long time, you can now easily replace the filter.

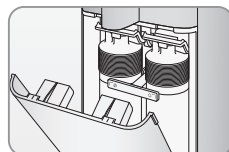

4

Small, Slim, Sophisticated Design

The sophisticated slim design makes it easy to use even in small spaces.



5

Smart LED Display

Through the LED display on the control panel & indicator, you can check the operating status of the product.



6

Instant Water Heating

Instant water heating function enables you to have more hygienic water than stored hot water. Also it helps to save energy as heating function is activated only when needed.



DEAR CUSTOMERS

Thank you for using **Coway Water Purifier.**

Please read this user manual to learn about proper usage and maintenance of the product.

When a problem occurs while using the product, it can be solved by referring to the instructions in this manual.

CONTENTS

Product Information

- | 03 | **Safety Information**
 - Power
 - Installation
 - During Use
 - Others
- | 07 | **Parts Name**
- | 08 | **Water Purification Process**

How to use

- | 09 | **Please Check Before Use**
- | 10 | **Buttons and Indicators**
- | 15 | **How to Get the Desired Water**
 - How to Get Hot Water
 - How to Get Ambient Water
 - How to Get Cold Water

Maintenance

- | 17 | **How to Install**
- | 20 | **How to Clean**
- | 24 | **Filter Replacement**
- | 25 | **How to Replace the Filter**

Others

- | 27 | **Troubleshooting**
- | 28 | **Specifications**
- | 29 | **Water Flow Diagram**

SAFETY INFORMATION

Be careful to keep this safety information.

Please read this information to prevent property loss and ensure your safety.



for 220 V~ 50 Hz use only

▲ Danger : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

- Do not use a damaged power plug or loose power outlet.
- Do not pull on the power cord.
- Do not pull on the power cord to move the product.
- Do not touch the power plug with wet hands.
- Do not bend the power cord excessively or put it under a heavy object to avoid damage or deformation.
- Do not plug and unplug the power cord repeatedly.
- When the power area comes into contact with water, unplug the power plug and completely dry it prior to use.
- Make sure to unplug the power cord when repairing, inspecting the product or changing its parts.
- Completely wipe off dust, water, etc. on the power plug's pins and areas of contact with the pins.
- **Do not connect multiple products to one power outlet. Use a separate socket for the product.**
- Lock the tap water supply valve and disconnect power when not using the product for an extended period of time.
- Do not modify the power cord on your own.
- If the power cord is damaged, do not attempt to replace the cord. Instead, contact the service center to replace it.
- Do not install near sources of heat.

-
- Connect the tap water to the cold water tubing.
 - Please lock the tap water valve and disconnect the power plug and contact the service center if there is water leakage from inside the product or if water is puddling around the product.
 - Immediately disconnect the power plug and contact the service center if there is any burning smell or smoke or strange noises from the product.
 - Do not place candles or cigarettes on top of the product.
 - Do not place bowls filled with water, chemicals, food, small metals, or flammable substances on top of the product.
 - Anyone who has insufficient physical, sensory or mental ability (including children) must be supervised or instructed to use the product.
 - It is recommended to keep eyes on children to make sure they do not play with the product.
 - Disconnect the power plug prior to cleaning.
 - Do not arbitrarily open, repair, or remodel the product.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SAFETY INFORMATION

▲ Warning : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- Do not apply excessive force or impact to the product.
- Do not install the product on a tilted surface. Do not apply excessive force or impact to the product.
- Do not install in a location with too much humidity or dust or in a location exposed to water or rain.
- Do not directly spray water on product for cleaning or use benzene or thinner to wipe the product.


//////////

⚠ Caution : Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or damage to the product or other properties.

- Use tap water as source water.
 - ① Use tap water that is suitable for drinking as source water.
 - ② Do not use in places of high temperatures such as a bathroom.
 - ③ Do not use in places of high humidity or temperature.
- Drain the stored water as well as newly filtered water one more time completely prior to use when not using the product for an extended period of time.
- Hot water is very hot, so avoid direct contact with your body.
- Please replace the filter according to the filter replacement cycle for clean water.
- **Make sure to use the new hose set provided with the product. Do not use an old hose set.**
- Do not use the filtered water for replacing water in fish tanks and aquariums.

PARTS NAME

Front/Rear

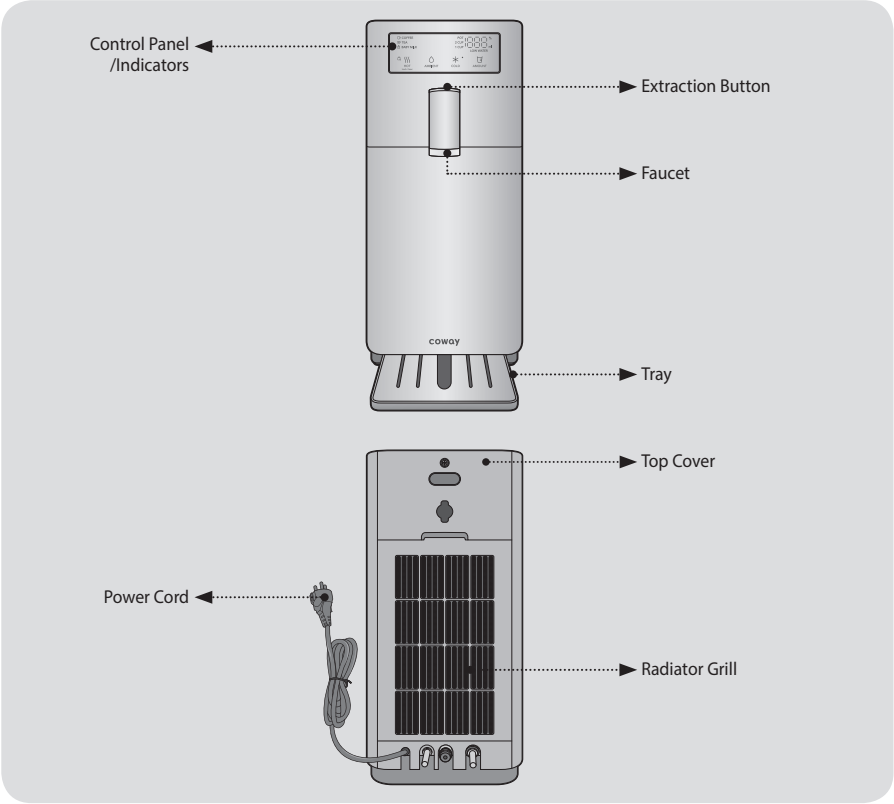

Accessories



Tips

- Product servicing by specialists is provided to rental and membership customers.

WATER PURIFICATION PROCESS

The essence of the water purification system lies in the filters.

Using an uncertified filter; or even using a certified yet expired filter may reduce filter performance.


2-Step Water Purification System (CHP-6200N)

Step 1 : Nanotrap™ Filter

Nanotrap™ Filter removes particulates in drinking water, waterborne microorganisms, bacteria and virus.

Step 2 : Plus Inno-Sense Filter(D)

Plus Inno-Sense Filter(D) improves the taste of water by removing pollutants, such as odor-causing substances, soluble contaminant, chlorine and volatile organic compounds (VOC's).

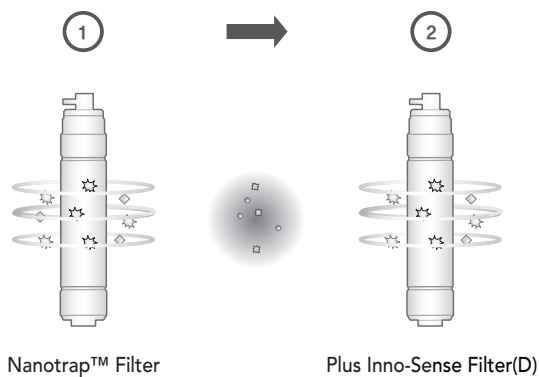

CHECK BEFORE USE

Please check before use!

⚠ This product is for 220 V~ 50 Hz.

Make sure to connect the power plug to a grounded 220 V~ 50 Hz outlet.
It requires a power supply to operate.



■ Open the tap water supply valve.

The water purifier can work properly only when the tap water is supplied.

■ After installing the water purifier

If the product is turned on, FL is displayed.

Select ambient water button and press the extract button to flush the filter.

- Prepare a large container to hold the water during the flushing process. It takes about 3 minutes.
- After flushing the filter, extraction may pause for a while because the hot water tank and cold water tank need to be filled with water.
- The flushing progress is displayed as 0 to 100 %. It takes about 4 to 5 minutes in total.

■ When indicator light on the display is turned off

When the indicator light is off, check if there is a blackout or if the power supply is cut off for other reasons.

■ Regular filter replacement

Regular filter replacement is crucial for clean drinking water. Using expired filters decreases water purifier performance, so please replace the filters on time.

■ When the product has not been used for a long time

If you stored water or have not used the system for a long time, extract 1 cup of hot water and continuous extraction of cold water for 3 minutes before use.

■ After restarting the product

If the product is restarted, water comes out of the water drain by default hot water setting.

The progress is displayed as 0 to 100%.
It takes about 20 to 30 seconds.




Tips

- Turn off the tap water valve when the product is not in use for a long time.

BUTTONS AND INDICATORS

Indicators

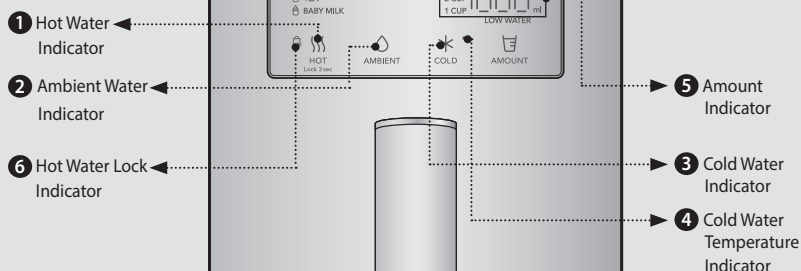

HOT
Lock 3 sec

1 Hot Water Indicator

The indicator lights up when hot water is selected.



AMBIENT

2 Ambient Water Indicator

The indicator lights up when ambient water is selected.



COLD

3 Cold Water Indicator

The indicator lights up when cold water is selected.



COLD

4 Cold Water Temperature Indicator

The indicator lights up according to the temperature of the cold water. When the light indicator turns blue, the water is at its coldest.



5 Amount Indicator

The amount of selected extract is displayed.

* 4 Stages(1 CUP 250 ml / 2 CUP 500 ml /
POT 1 000 ml / Continuous Extraction(CON).




6 Hot Water Lock Indicator


The indicator lights up when hot water lock mode is selected. When all-lock function is selected, this indicator also lights up.

BUTTONS AND INDICATORS

Indicators

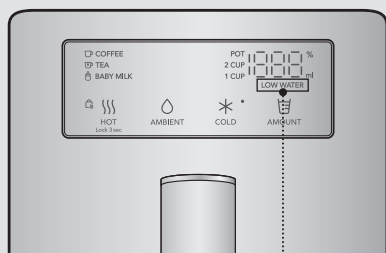

7 Low Water Indicator

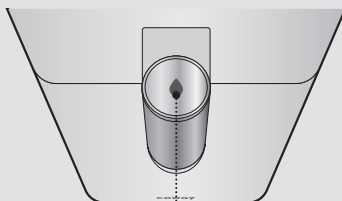

8 Extraction Indicator

LOW WATER

7 Low Water Indicator

The low water indicator lights up when the water pressure is low or the flow rate is low.


- * If this indicator lights up during hot water extraction, the extraction stops immediately and hot water extraction is not available for 10 seconds.
- * If this indicator lights up during ambient water or cold water extraction, the extraction does not stop (Follow the installation conditions and filter replacement cycle).



8 Extraction Indicator

The indicator lights up when water is being extracted.

Buttons

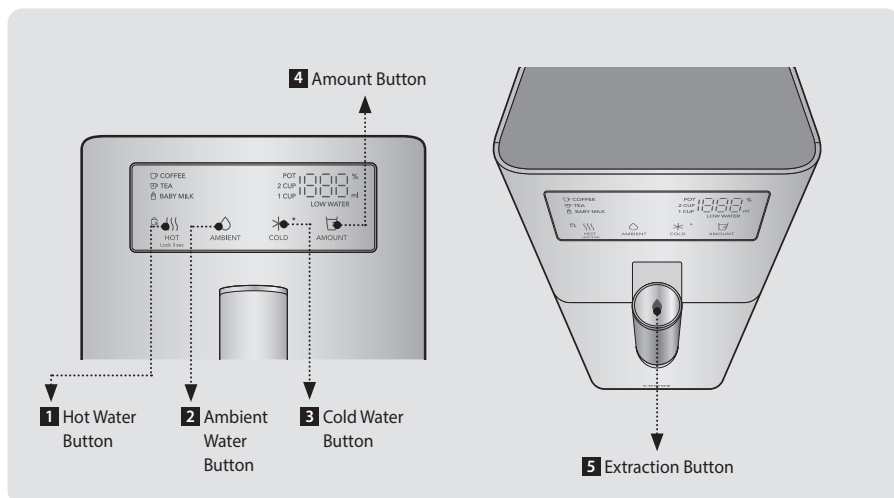

HOT
Lock 3 sec

1 Hot Water Button

Use when you wish to extract hot water. Each time you press the button, you can set the hot water temperature (COFFEE, TEA, BABY MILK).



AMBIENT

2 Ambient Water Button

Press it when you wish to extract ambient water.



COLD

3 Cold Water Button

Use when you wish to extract cold water.



AMOUNT

4 Amount button

Use when you wish to select desired extraction amount.

* 1 CUP 250 ml / 2 CUP 500 ml / POT 1 000 ml / Con (Continuous Extraction) will be selected in order.

**5 Extraction Button**


Press it when you wish to extract water.

BUTTONS AND INDICATORS

■ If you wish to use the fixed amount extraction function

You can touch the fixed amount button in succession to switch between 4 options : 1 cup (250 ml), 2 cups (500 ml), POT (1 000 ml) and Con(Continuous extraction for about 3 minutes).


- * During extraction, press the extraction button again to stop extraction.
- * The initial setting is set to 1 cup. If you wish to change the default setting, press the desired extraction volume button for 3 seconds (continuous extraction cannot be set as the default setting).

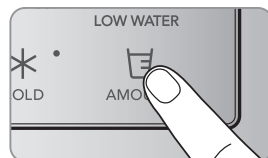

■ Using the cold water function

In the initial state, the cold water function is set (the cold water temperature indicator is lit).


- * When cooling is complete, the cold water temperature indicator changes from white to blue (It takes 2-3 hours depending on the outside temperature).
- * To turn off the cold water function, press the cold water button for about 5 seconds (Cold water temperature indicator : Off).
- * To turn on the cold water function again, press the cold water button for about 2 seconds (Cold water temperature indicator : On).
- * To maintain cooling performance, remove the mesh on the back of the product and clean it periodically (Every 2-4 months).

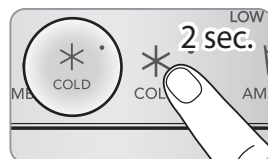

■ Using the hot water function

Press hot water button and check that the hot water indicator is turned on.


- * When extracting hot water, pay special attention to avoid burns.
- * There may be some delay to heat water until the desired temperature is reached.
- * During extraction, the amount of extraction is displayed and heating noise may occur.
- * Excessive use of hot water will limit its use to protect the product (If used for 7 minutes or more in 10 minutes, hot water is not available for 5 minutes).
- * Every time the power is turned on, hot water flushing is automatically performed for about 30 seconds (the progress is displayed as 0 to 100 %).

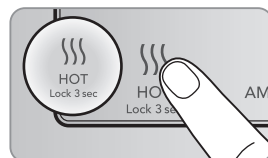

■ To use the mute function

If you touch the ambient water button and the fixed amount button for more than 2 seconds, the mute function is activated. When the mute function is activated, the alarm does not ring even when you touch all button or when the extraction is completed or switched to the continuous extraction.


* To release the mute function, touch the ambient water button and the fixed amount button for more than 2 seconds.

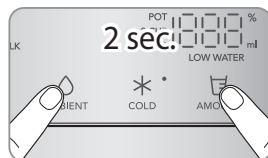

■ To use the hot water lock function

Press and hold the hot water button for more than 3 seconds to generate the setting sound and turn on the lock LED.

To turn off the hot water lock function, press the hot water button for more than 3 seconds.

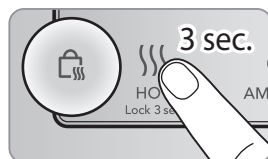


■ To use the all-lock function

Press and hold the hot water button and the ambient water button at the same time for about 2 seconds to lock the all functions.

To turn off the all-lock function, press the hot water button and ambient water button at the same time for about 2 seconds.

* When all-lock function is set, all indicators turn off and only the hot water lock indicator light up.


* If you set the all-lock function and then canceled it while using the hot water lock function, the hot water lock function will be maintained and the lock button will light up.

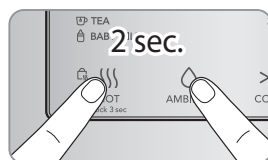

■ To use the extraction LED On/Off during standby

Press and hold the ambient water button for more than 5 seconds to turn off Extraction LED. To turn on the Extraction LED, press the ambient water button for more than 2 seconds.

* If the Extraction LED is turned off, the Extraction LED will turn on during extraction.

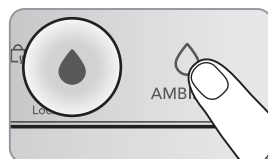

HOW TO GET THE DESIRED WATER

How to Get Hot Water

- Fixed amount extraction method

Touch the hot water button and select the desired extraction amount with the amount button.

Press the extraction button, and hot water is extracted according to the selected quantity.


During extraction, if you press the extraction button again, then extraction is stopped (250 ml, 500 ml, 1 000 ml, and continuous extraction can be selected, in that order).

- Continuous extraction method

Press the extraction button after the extraction amount display has changed to Con by pressing the fixed amount button or press the extraction button for 2 seconds or longer, it will be extracted consecutively for about 3 minutes. During extraction, if you press the extraction button again, then extraction is stopped.

- Hot water temperature selection method

Select the desired temperature with the hot water button (Coffee, tea, and baby milk can be selected, in that order).

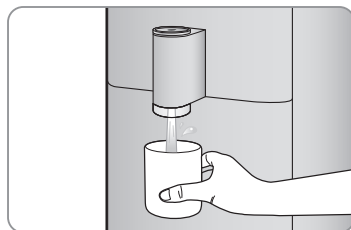

Tips

- Every time the power is turned on, hot water flushing is automatically performed for about 30 seconds (The progress is displayed as 0 to 100 %. If the flushing is stopped in the middle, this process must be restarted from the beginning).
- Excessive use of hot water will limit its use to protect the product (If used for 7 minutes or more in 10 minutes, hot water is not available for 5 minutes).
- When extracting hot water, pay special attention to avoid burns.
- When extracting hot water, keep the cup close to the faucet as the water may splash. (However, in case of inconvenience, use the faucet extract extension).
- When extracting hot water, there may be some delay to heat water until the desired temperature is reached.
- When heating hot water, boiling noise may occur.
- To prevent hot water burns, the system automatically switches cold water or ambient water if the button is not pressed within a certain amount time (about 7 seconds) after the hot water button was selected (When the cold function is turned off, the state is changed to the ambient state).
- If you hear only warning sounds with no hot water coming out, check the lock LED (see p.14).
- When hot water is extracted, white debris (lime) may occur depending on the conditions of use. If you find a white foreign substance, please contact our service center.
 - * White foreign substance is limescale, which is produced by heating of the minerals in water.



How to Get Ambient Water

- Fixed amount extraction method

Touch the ambient water button and select the desired extraction amount with the amount button. Press the extraction button, and ambient water is extracted according to the selected quantity. During extraction, if you press the extraction button again, then extraction is stopped (250 ml, 500 ml, 1 000 ml, and continuous extraction can be selected, in that order).

- Continuous extraction method

Press the extraction button after the extraction amount display has changed to Con by pressing the fixed amount button, or press the extraction button for 2 seconds or longer. During extraction, if you press the extraction button again, then extraction is stopped.

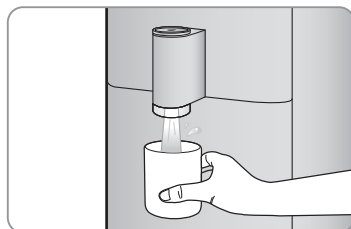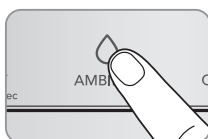



How to Get Cold Water

- Fixed amount extraction method

After checking the cold water temperature indicator, touch the cold water button and press the amount button to select the desired extraction amount. Press the extraction button, and cold water is extracted according to the selected quantity. During extraction, if you press the extraction button again, then extraction is stopped (250 ml, 500 ml, 1 000 ml, and continuous extraction can be selected, in that order).

- Continuous extraction method

Press the extraction button after the extraction amount display has changed to Con by pressing the fixed amount button, or press the extraction button for 2 seconds or longer for continuous extraction. During extraction, if you press the extraction button again, then extraction is stopped.

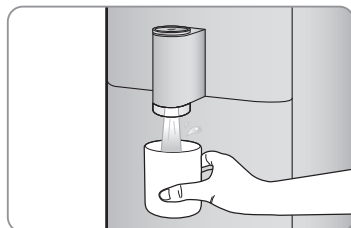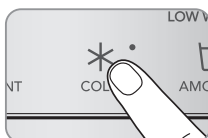


Tips

- If cold water is not being dispensed, please check to see whether the cold water temperature indicator on the display unit is turned on (see p.13).

HOW TO INSTALL

Installation Guide

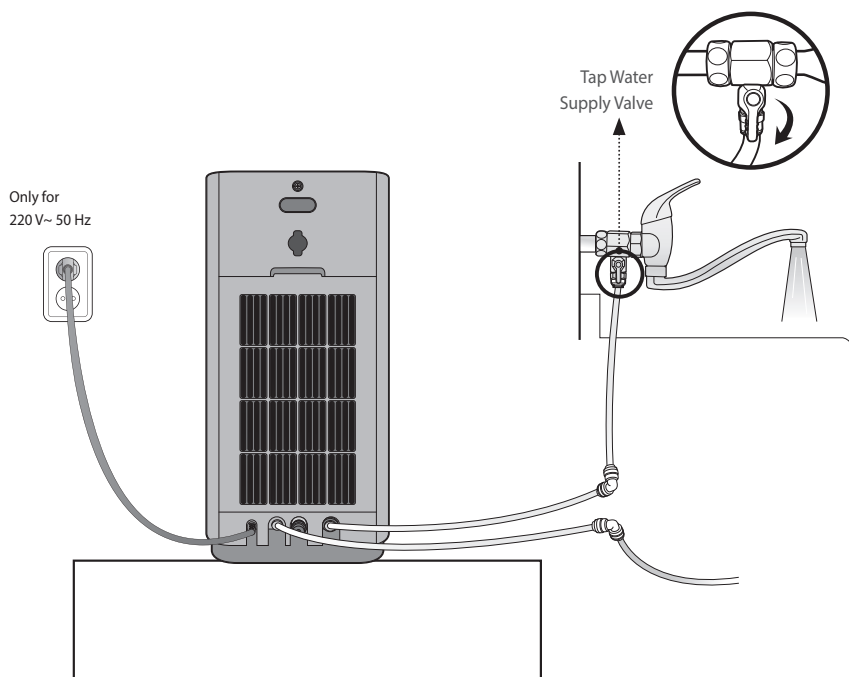


Connect the orange inlet for the tap water supply hose ❶
to the tap water pipe. Connect the drain connection ❷.
(COLD OUT ❸)

INLET : Tap water supplying hose (Orange) tubing


COLD WATER OUTLET : Fitting

HOT WATER OUTLET : Drain (Grey) Connection

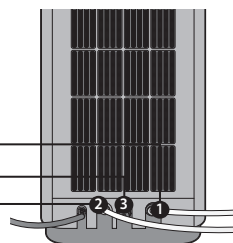

► Feed water supply condition : 20 psi, 3 LPM or higher

Installation Guide

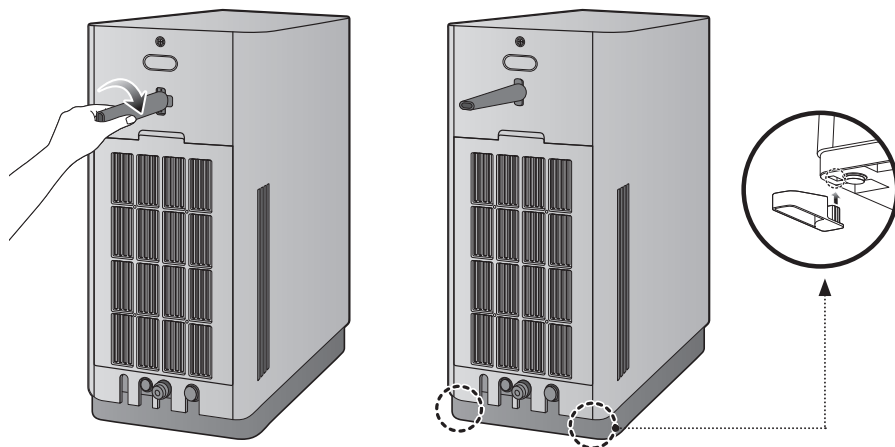

Tips

⚠ If the components above are not installed, it may compromise on cooling performance.

HOW TO INSTALL

Caution!

⚠ Place for Installing Water Purifier I

Avoid installing the water purifier in an area with uneven surface, extreme humidity, extreme light exposure, extreme dust exposure, and water exposure, etc.

⚠ Place for Installing Water Purifier II

Keep the radiator grill at the rear of the product at least 10 cm away from the wall and make sure that the installation floor is firm.

⚠ Cold Water Tubing

Make sure to connect it to the cold water tubing
(If connected to the hot water tubing, the filters can get damaged).

⚠ After Installation (Flushing step)

If the product is turned on, FL is displayed. Select ambient water button and press the extract button to flush the filter.

- Prepare a large container to hold the water during the flushing process. It takes about 3 minutes.
- After flushing the filter, extraction may pause for a while because the hot water tank and cold water tank need to be filled with water.
- The flushing progress is displayed as 0 to 100 %. It takes about 4 to 5 minutes in total.
You can pause the process.
- When the power is turned off in the middle, flushing must be performed again from the beginning.
(* After flushing, some water may come out of the faucet for about 10 minutes during the cold water generation process.)

⚠ After restarting the product (automatic hot water flushing)

If the product is restarted, hot water flushing is automatically performed.

- It takes about 30 seconds. The progress is displayed as 0 to 100 %.
- This process cannot be paused while in progress.



Tips


- ⚠ Vibration and chattering of a valve may occur during the initial use of the water purifier and it will disappear naturally.
- ⚠ Some residual water used during post-manufacturing inspection may be present in the filter. Do not be alarmed as it is not a used product.
- ⚠ Do not reuse the previously used tap water supply valve and hose when installing the purifier.

HOW TO CLEAN

How to Clean the Tray


1. How to take out the tray

The front of the tray can be easily separated by lifting it up slightly.
Separate the tray and wipe the inside and outside with a cloth.

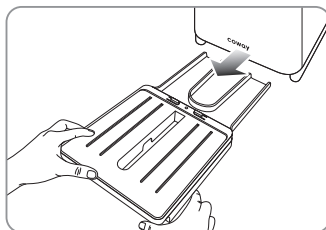

2. How to assemble tray

Slide the tray into the bottom of the product and then place the cover in place.

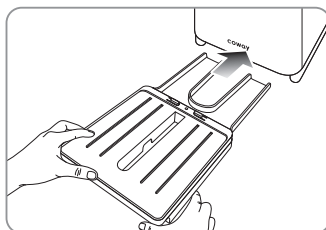

How to clean the product body (once every 2~4 weeks)

Wipe the product with a clean towel.

* For thicker layers of dust, use a wet towel to wipe
(Do not use an abrasive.)



Tips



- Do not directly spray water to the product body to clean it.
- Do not use thinner, benzene or agent containing abrasives or rough cloths to clean it.

HOW TO CLEAN

How to Clean the Faucet

1. Detach the faucet by turning it clockwise.


- * The faucet consists of two parts.
- * Remove the inside facet tip in the downward direction.

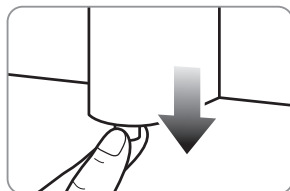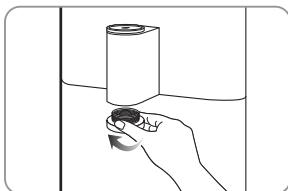



2. Rinse the faucet with water.



3. After rinsing, wipe the faucet with a soft, dry cloth.

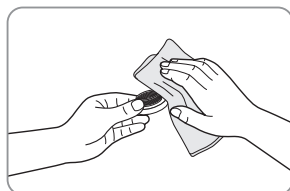


4. Attach the faucet back by turning it counter clockwise.

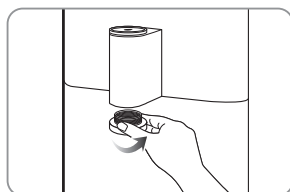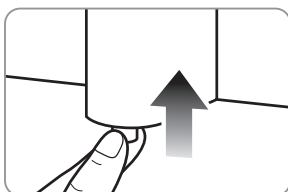



How to Drain the Internal Water Tank

1. Close the tap water supply valve.

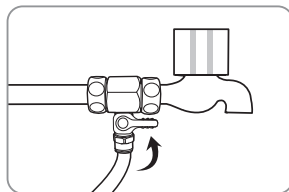


2. Remove the cold water drain cap at the rear of the product to completely drain the water from the cold water tank.


* If you remove the cold water drain cap, then cold water is drained immediately.
So prepare a container for the cold water.

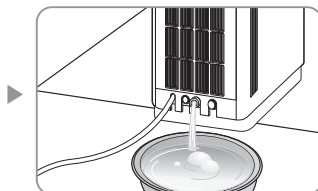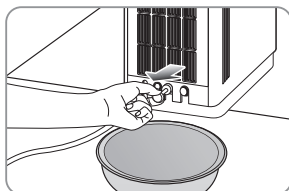

3. Insert the cold water drain cap.

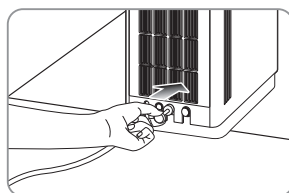


4. Open the tap water supply valve.

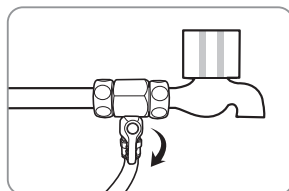

5. Select cold water and extract water for about 3 minutes.

* After filling the water tank again, water may come out of the faucet for about 5~10 minutes during the cold water generation process.

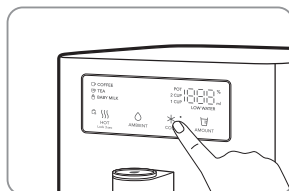



HOW TO CLEAN

How to Clean the Rear Mesh

1. How to remove the rear mesh



Put a finger in the upper groove of the mesh and pull it to remove.

Clean the mesh with a cloth and water.

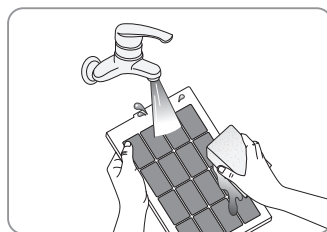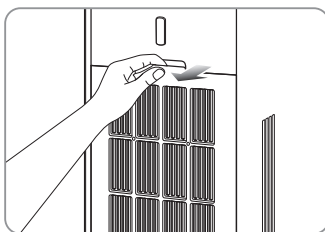

2. How to assemble the rear mesh

Insert the mesh into the lower groove of the product and then push the mesh toward the product.

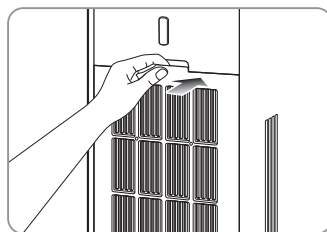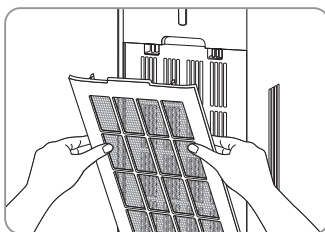

FILTER REPLACEMENT

■ Filter Replacement Cycle

If the filter is not regularly replaced, it may degrade the water quality from the product.

The filter change cycle may vary within the range of expected replacement cycle depending on the source water quality.



Tips

The period for filter change is calculated based on 10 L water usage per day for a household of 4 members.

CHP-6200N



Filter Name	Expected Replacement Cycle
Nanotrap™ Filter	4 months
Plus Inno-Sense Filter(D)	4 months

HOW TO REPLACE FILTER


Replace the Filter!

1. Detach the faucet by turning it clockwise.



- * The faucet consists of two parts.
- * Remove the inside facet tip in the downward direction.
- * Be careful not to lose the separated faucet parts.

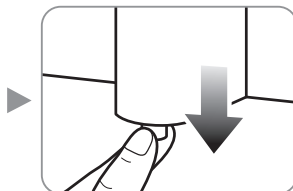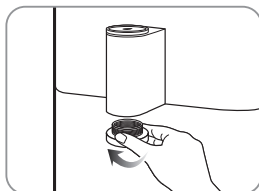


2. Remove the filter cover on the front.

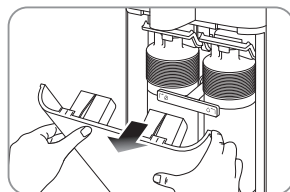


3. Shut off the tap water valve (rotate 90 degrees in the direction of CLOSE).

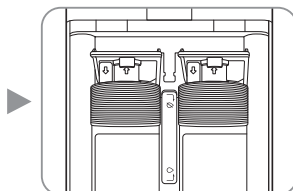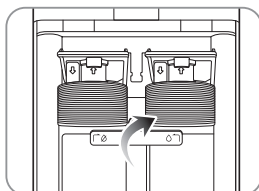


4. Press the extraction button to empty the remained water.

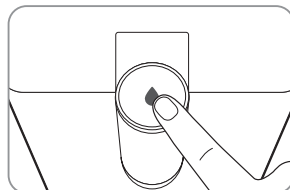



5. Please take out the filter by lifting the filter holder.

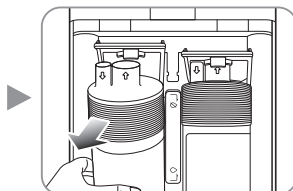


6. Insert the new filter in the appropriate order of the filters.

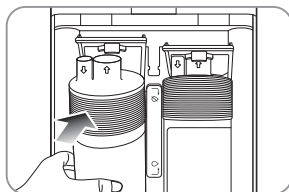



7. Check that the filter holder comes down for a secure fit. Then, open the tap water valve (Rotate 90 degrees in the direction of OPEN).

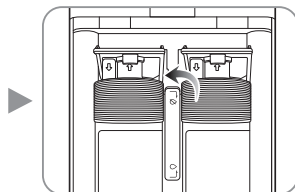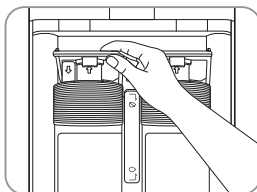



8. Close the filter cover on the front.

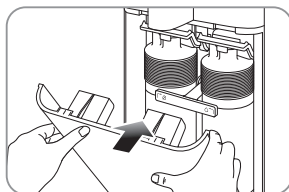

9. Attach the faucet back by turning it counter clockwise.

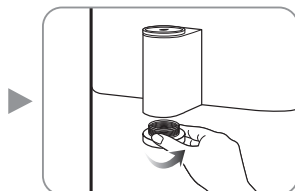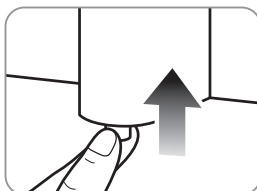

10. Select the ambient water and extract water for about 3 minutes to flush the filters.

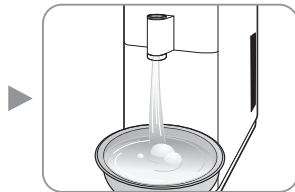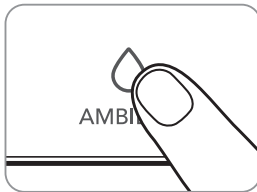

Tips

For fitting, tubing, or faucet that have been used for more than 5 years, contact the service center, and we can replace it with new ones(Replacement costs may incur).

TROUBLESHOOTING

The water purifier may operate abnormally because the user is unfamiliar with the product or due to some other reasons and not because of a product malfunction. In such a case, problems can be easily solved without help from the service center by checking the following. If the problem is not solved after checking the following, please call the service center.

Symptom	Check	Measures to take
Water tastes strange.	• Isn't it time for filter replacement?	Please request for filter replacement.
Water is not being dispensed.	• Is the device disconnected from the water supply or is the tap water supply valve locked?	Open the tap water supply valve.
	• Did you miss the filter replacement period?	Please request for filter replacement.
Amount of water filtration is much lower than before.	• Isn't it time for filter replacement?	Please request for filter replacement.
	• Is the power connected?	Check that the power cord is plugged into a 220V~ 50 Hz outlet.
	• Is the tap water supply valve locked?	Open the tap water supply valve.
Cold water is not being dispensed.	• Is the cold water temperature indicator turned on?	Press the cold water button for 2 seconds to turn on the cold water function.
	• The cooling unit does not seem to work.	Please request for repair service.
	• Is the power connected?	Check that the power cord is plugged into a 220V~ 50 Hz outlet.
	• Is the tap water supply valve locked?	Please open the tap water supply valve.
	• Is the product too close to the wall?	Keep the product at least 10 cm away from the wall.
Hot water is not being dispensed.	• Is the hot water lock indicator turned on?	Turn off the hot water lock function.
	• Is the tap water supply valve locked?	Open the tap water supply valve.
	• Is the power connected?	Check that the power cord is plugged into a 220V~ 50 Hz outlet.
	• Is there leakage or flooding of hot water?	Please request for repair service.
	• When you selected hot water extraction, did you hear a warning sound and water could not be extracted?	This is an automatic shutoff function to prevent overheating of the heater inside the product. After a while, you can extract hot water again.
	• When selecting hot water, 'Hot' is displayed and a warning sound is heard.	
Water does not come out or the drained quantity is different than before.	• When selecting hot water, countdown is displayed every 1 second and a warning sound is heard.	
	• Isn't it time for filter replacement?	Please request for filter replacement.
	• Is the device disconnected from the water supply or is the tap water supply valve locked?	Open the tap water supply valve.
Water leaks.	• Is the hose bent or cut?	Unfold the hose correctly.
	• Is there water from the inside of the product?	After closing the tap water supply valve, ask for maintenance service.
The device stops suddenly.	• Is the water supply intact?	Please check the tap water supply valve.
	• Is the power connected?	Check that the power cord is plugged into a 220V~ 50 Hz outlet.
	• Is there leakage or flooding of filtered water?	Please request for repair service.

SPECIFICATION

Product Name		Coway Water Purifier
Model Name		CHP-6200N
Filtration Method		Electrostatic adsorption method
Rated Voltage		220 V~ 50 Hz
Power Consumption		Cool : 0.5 A, Heat : 2720 W, Total : 2730 W
Details on Indicator		Water temperature display, lock function
Main Functions		Ambient water, cold water, hot water, overheating prevention, fixed amount extraction, continuous extraction
Water Tank Capacity	Cold Water	1.35 L
	Hot Water	Instant hot water heating method
	Ambient Water	Direct water type
	Total	1.35 L
Filter Material	Nanotrap™ Filter	Bohemite, Polypropylene, Cellulose
	Plus Inno-Sense Filter(D)	Active carbon block, felt
Product Size		180 mm (width) × 440 mm (depth) × 422 mm (height)
Tap Water Temperature		5 °C - 35 °C
Working Temperature		5 °C - 35 °C
Operating Pressure (Tap Water)		138 kPa ~ 827 kPa (20 psi ~ 120 psi) minimum tap water capacity 3.0 L/min


- ▶ Water tank capacity depends on the bucket size and may differ from the extraction quantity.
- ▶ Product design and specifications are regulated by law and are subject to change without prior notice to improve the product or its quality.

THAILAND

Add : Coway (Thailand) Co., Ltd.
 75/104-106 Ocean Tower 2 38th Fl, Soi Sukhumvit
 19 (Wattana), Sukhumvit Road, Klongtoey Nua,
 Wattana, Bangkok 10110
 Call center : 1421

WATER FLOW DIAGRAM

CHP-6200N

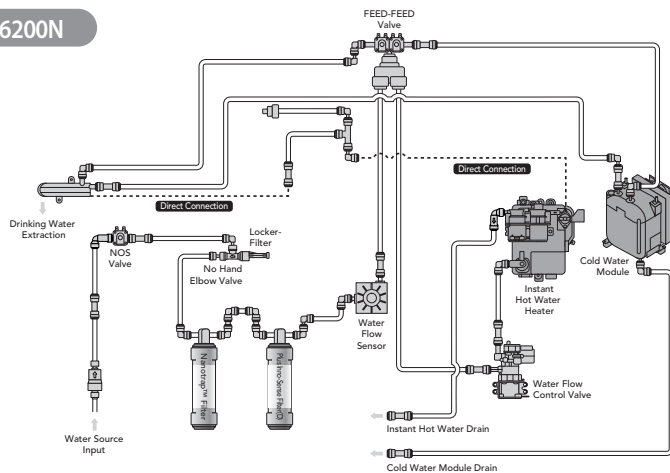

MEMO

////////////////////////////////////

ฟีเจอร์

ระบบทำน้ำดื่มโดยตรง

1


ไส้กรอง Nanotrap™ กำจัดอนุภาคฝุ่นในน้ำดื่ม จุลินทรีย์ เชื้อแบคทีเรีย และเชื้อไวรัสในน้ำ ไส้กรอง Plus Inno-Sense (D) ช่วยปรับปรุงรสชาติของน้ำโดยการกำจัดสารมลพิษต่างๆ เช่น สารที่ทำให้เกิดกลิ่น สารปนเปื้อนที่ละลายในน้ำ คลอรีน และสารประกอบอินทรีย์ระเหยง่าย (VOC's) ระบบทำน้ำดื่มโดยตรงนี้ใช้เพื่อทำให้การใช้งานมีสุขอนามัยยิ่งขึ้น



ระบบทำความเย็นอิเล็กทรอนิกส์

2


ระบบทำความเย็นของเราไม่ใช้สารหล่อเย็น และเครื่องทำน้ำดื่มนี้เป็นมิตรต่อสิ่งแวดล้อม นอกจากนี้ ผลิตภัณฑ์ยังใช้ระบบทำความเย็นแบบไฟฟ้า ซึ่งทำให้เสียงการทำงานเบาลง

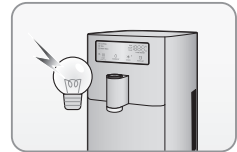

การเปลี่ยนไส้กรองอย่างง่ายดาย

3

ต่างจากวิธีเปลี่ยนไส้กรองเครื่องทำน้ำดื่มทั่วไป ซึ่งใช้เวลานาน ท่านจะสามารถเปลี่ยนไส้กรองได้อย่างง่ายดาย

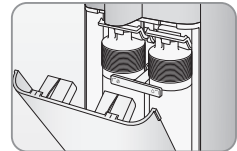

ขนาดเล็ก บาง และดีไซน์อย่างมีรสนิยม

4

ดีไซน์ที่บางอย่างมีรสนิยมทำให้สะดวกต่อการใช้งานในพื้นที่แคบ



หน้าจอสมาร์ต LED

5

ท่านสามารถตรวจสอบสถานะการทำงานของผลิตภัณฑ์ได้จากจอ LED บนแผงควบคุมและตัวจับออก



การกักน้ำร้อนทันที

6

ฟังก์ชันการกักน้ำร้อนทันทีทำให้ท่านได้น้ำร้อนที่สะอาดกว่าน้ำร้อนที่ถูกเก็บไว้ นอกจากนี้ยังช่วยประหยัดพลังงาน เนื่องจากฟังก์ชันการทำความร้อนจะเปิดใช้งานเมื่อจำเป็นเท่านั้น



เรียนลูกตา

ขอบพระคุณที่ใช้งาน **เครื่องทำน้ำดื่ม Coway**

โปรดอ่านคู่มือผู้ใช้นี้ เพื่อเรียนรู้เกี่ยวกับการใช้งานและการดูแลรักษาผลิตภัณฑ์นี้อย่างเหมาะสม เมื่อพบปัญหาในขณะที่ใช้งานผลิตภัณฑ์นี้ คุณสามารถแก้ไขปัญหาได้โดยการอ้างอิงคำแนะนำในคู่มือนี้

เนื้อหา

ข้อมูลผลิตภัณฑ์

- | 03 | ข้อมูลความปลอดภัย
พลังงาน
การติดตั้ง
ระหว่างการใช้งาน
อื่นๆ
- | 07 | ข้อควรระวังต่างๆ
- | 08 | กระบวนการทำน้ำดื่ม

วิธีการใช้งาน

- | 09 | ตรวจสอบก่อนใช้งาน
- | 10 | ปุ่มและตัวขับเคลื่อน
- | 15 | วิธีการน้ำดื่มที่ต้องการ
วิธีการน้ำร้อน
วิธีการน้ำอุณหภูมิห้อง
วิธีการน้ำเย็น

การซ่อมบำรุง

- | 17 | วิธีติดตั้ง
- | 20 | วิธีทำความสะอาด
- | 24 | การเปลี่ยนไส้กรอง
- | 25 | วิธีเปลี่ยนไส้กรอง

อื่นๆ

- | 27 | การแก้ปัญหา
- | 28 | ข้อมูลจำเพาะ
- | 29 | แผนภาพการไหลของน้ำ

ข้อมูลความปลอดภัย

โปรดเก็บข้อมูลความปลอดภัยไว้

โปรดอ่านข้อมูลต่อไปนี้เพื่อป้องกันทรัพย์สินเสียหายและเพื่อรักษาความปลอดภัยของคุณ



สำหรับใช้งานกับ 220 V~ 50 Hz เท่านั้น

▲ อันตราย : ระวังอันตรายที่จะเกิดขึ้นหากไม่หลีกเลี่ยง ซึ่งอาจทำให้ถึงแก่ชีวิตหรือการบาดเจ็บสาหัส

- อย่าใช้ปลั๊กที่ชำรุดหรือใช้เต้ารับที่หลวม
- อย่าดึงที่สายไฟ
- อย่าดึงสายไฟในการเคลื่อนย้ายผลิตภัณฑ์
- อย่าจับปลั๊กด้วยมือที่เปียก
- อย่าขมสายไฟมากเกินไป หรือวางสายไฟไว้ข้างใต้วัตถุที่มีน้ำหนักมากเพื่อหลีกเลี่ยงการเกิดความเสียหายหรือการผิดรูป
- อย่าเสียบและถอดสายไฟซ้ำ ๆ กัน
- เมื่อบริเวณปลั๊กไฟเปียกขึ้น ให้ถอดปลั๊กแล้วเช็ดให้แห้งสนิทก่อนการใช้งาน
- อย่าลืมหอดูปปลั๊กก่อนที่จะทำการซ่อมแซม ตรวจสอบ หรือเปลี่ยนอะไหล่ของผลิตภัณฑ์
- เช็ดฝุ่น น้ำ ฯลฯ บนขาปลั๊กและหน้าสัมผัสของขาปลั๊กให้สะอาด
- อย่าต่อเครื่องใช้ไฟฟ้าหลายเครื่องเข้ากับเต้ารับแผงเดียว ใช้เต้ารับแยกเฉพาะสำหรับผลิตภัณฑ์นี้
- ปิดวาล์วจ่ายน้ำแล้วถอดปลั๊กเมื่อจะไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน
- อย่าดัดแปลงสายไฟด้วยตนเอง
- หากสายไฟเสียหาย อย่าพยายามเปลี่ยนสายไฟ โปรดติดต่อศูนย์บริการเพื่อแจ้งขอเปลี่ยนสายไฟ
- อย่าติดตั้งไว้ใกล้กับแหล่งความร้อน

- ต่อน้ำประปาเข้ากับท่อน้ำเย็น
- โปรดปิดวาล์วน้ำประปาและถอดปลั๊ก แล้วติดต่อศูนย์บริการ หากมีน้ำรั่วออกจากภายในของผลิตภัณฑ์หรือมีน้ำเจือปนของรอบๆ ผลิตภัณฑ์
- ถอดปลั๊กทันที และติดต่อศูนย์บริการหากมีกลิ่นไหม้ คว้น หรือเสียงแปลกๆ จากผลิตภัณฑ์
- อย่าวางเทียนหรือบุหรืบนผลิตภัณฑ์
- อย่าวางภาชนะที่บรรจุน้ำ สารเคมี อาหาร วัตถุโลหะเล็กๆ หรือวัตถุไวไฟบนผลิตภัณฑ์นี้
- บุคคลที่มีความบกพร่องทางร่างกาย การรับรู้ หรือสติปัญญา (รวมถึงเด็ก) ต้องได้รับการกำกับดูแลหรือคำแนะนำเพื่อใช้งานผลิตภัณฑ์นี้
- แนะนำให้ดูแลเด็กเพื่อให้แน่ใจว่า เด็กจะไม่เล่นกับผลิตภัณฑ์นี้
- ถอดปลั๊กก่อนที่จะทำความสะอาด
- อย่าเปิด ซ่อมแซม หรือดัดแปลงผลิตภัณฑ์นี้ตามอำเภอใจ
- ผลิตภัณฑ์นี้สามารถใช้งานได้โดยเด็กที่มีอายุ 8 ปีขึ้นไป และบุคคลที่มีความบกพร่องทางร่างกายหรือจิตใจ หรือบุคคลที่ขาดประสบการณ์และความรู้ หากพวกเขาได้รับการกำกับดูแลหรือได้รับคำแนะนำเกี่ยวกับวิธีการใช้งานเครื่องใช้ไฟฟ้านี้อย่างปลอดภัย และเข้าใจถึงอันตรายต่างๆ ที่เกี่ยวข้อง อย่าให้เด็กเล่นกับเครื่องใช้ไฟฟ้านี้ อย่าให้เด็กทำความสะอาดหรือซ่อมบำรุงโดยไม่มีการกำกับดูแล

ข้อมูลความปลอดภัย

▲ คำเตือน : ระเบิดอันตรายที่อาจจะเกิดขึ้นหากไม่หลีกเลี่ยงซึ่งอาจทำให้เกิดแก๊สหรือการบาดเจ็บสาหัส


- อย่าใช้ความรุนแรงหรือกระแทกผลิตภัณฑ์
- อย่าติดตั้งผลิตภัณฑ์บนพื้นที่มีความลาดเอียง อย่าใช้ความรุนแรงหรือกระแทกผลิตภัณฑ์
- อย่าติดตั้งในบริเวณที่มีความชื้นสูง มีฝุ่นมาก หรือจุดที่สัมผัสกับน้ำหรือฝน
- อย่าฉีดน้ำใส่ผลิตภัณฑ์โดยตรงเพื่อทำความสะอาด หรือใช้เบนซินหรือทินเนอร์เช็ดผลิตภัณฑ์

▲ ข้อควรระวัง : ระบุถึงอันตรายที่อาจเกิดขึ้นหากไม่หลีกเลี่ยง ซึ่งอาจทำให้เกิดการบาดเจ็บเล็กน้อยหรือปานกลาง หรือเกิดความเสียหายกับผลิตภัณฑ์หรือทรัพย์สินอื่นๆ

- ใช้น้ำประปาเป็นแหล่งน้ำเข้า
 - ① ใช้น้ำประปาที่เหมาะสมสำหรับดื่มเป็นแหล่งน้ำจืดเข้า
 - ② อย่าใช้งานในบริเวณที่มีอุณหภูมิสูงเช่นห้องน้ำ
 - ③ อย่าใช้งานในบริเวณที่มีความชื้นหรืออุณหภูมิสูง
- ระบายน้ำในตัวเครื่องและน้ำที่กรองใหม่ออกก่อนอีกหนึ่งรอบก่อนการใช้งานหลังจากที่ไม่ได้ใช้งานผลิตภัณฑ์มาเป็นเวลานาน
- น้ำร้อนนั้นจะร้อนมาก ระวังอย่าให้น้ำร้อนไปโดนร่างกาย
- โปรดเปลี่ยนไส้กรองตามรอบการเปลี่ยนไส้กรองเพื่อให้ได้น้ำสะอาด
- โปรดใช้ชุดท่อน้ำใหม่ที่มาพร้อมกับผลิตภัณฑ์ อย่าใช้ชุดท่อเก่า
- อย่าใช้น้ำที่กรองแล้วไปเปลี่ยนน้ำในตู้ปลาหรือบ่อเลี้ยงปลา

ชื่อชิ้นส่วนต่างๆ

หน้า/หลัง

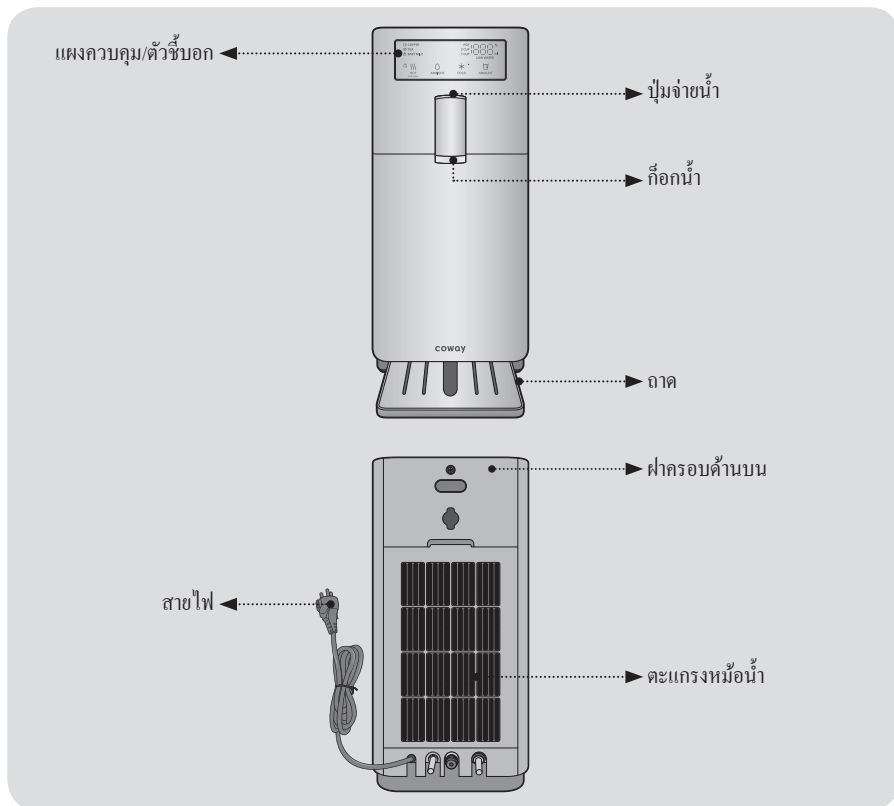

อุปกรณ์เสริม



คู่มือผู้ใช้



ฟิตติ้งคลิป



แท่งรักษา
ระยะห่าง



ไกด์รักษา
ระยะห่าง



ส่วนขยาย
ก๊อกน้ำ



ท่อ-ครอบท่อ
(1 ชิ้น)



ข้อต่อ



คำแนะนำ

- ลูกค้าในระบบเช่าซื้อและระบบสมาชิกจะได้รับบริการซ่อมบำรุงจากเจ้าหน้าที่ผู้เชี่ยวชาญตามรอบบริการที่กำหนด

กระบวนการทำน้ำดื่ม

หัวใจสำคัญของระบบทำน้ำดื่มนี้คือไส้กรอง

การใช้ไส้กรองที่ไม่ได้รับการอนุมัติหรือการใช้ไส้กรองที่หมดอายุแล้ว อาจลดประสิทธิภาพการทำงานในการกรองน้ำ


ระบบทำน้ำดื่ม 2 ขั้นตอน (CHP-6200N)

ขั้นตอนที่ 1 : ไส้กรอง Nanotrap™

ไส้กรอง Nanotrap™ กำจัดอนุภาคฝุ่นในน้ำดื่ม จุลินทรีย์ เชื้อแบคทีเรีย และเชื้อไวรัสในน้ำ

ขั้นตอนที่ 2 : ไส้กรอง Plus Inno-Sense(D)

ไส้กรอง Plus Inno-Sense (D) ช่วยปรับปรุงรสชาติของน้ำโดยการกำจัดสารมลพิษต่างๆ เช่น สารที่ทำให้เกิดกลิ่น สารปนเปื้อนที่ละลายในน้ำ คลอรีน และสารประกอบอินทรีย์ระเหยง่าย (VOC's)

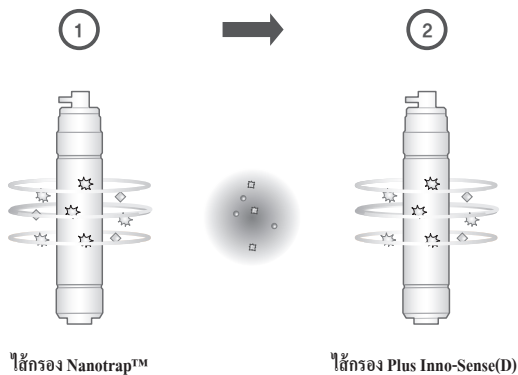

ตรวจสอบก่อนใช้งาน

โปรดตรวจสอบก่อนใช้งาน



ผลิตภัณฑ์นี้ใช้ไฟฟ้า 220 V~ 50 Hz

ตรวจสอบให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~ 50 Hz อุปกรณ์นี้จำเป็นต้องใช้ไฟฟ้าในการทำงาน



■ เปิดวาล์วจ่ายน้ำประปา

เครื่องทำน้ำดื่มจะทำงาน ได้อย่างถูกต้องต่อเมื่อจ่ายน้ำประปาเข้าเท่านั้น

■ หลังจากติดตั้งเครื่องทำน้ำดื่ม

หากผลิตภัณฑ์ถูกเปิด FL จะแสดงขึ้น เลือกปุ่มน้ำอุณหภูมิห้อง แล้วกดปุ่มจ่ายน้ำเพื่อปล่อยน้ำเข้าไส้กรอง

- เตรียมภาชนะขนาดใหญ่สำหรับรองรับน้ำระหว่างกระบวนการล้างไส้กรอง จะใช้เวลาประมาณ 3 นาที
- หลังจากล้างไส้กรองแล้วอาจไม่สามารถจ่ายน้ำสักครู่หนึ่ง เนื่องจากเครื่องกำลังดันน้ำในถังน้ำร้อนและถังน้ำเย็นให้เต็ม
- กระบวนการล้างจะแสดงเป็น 0 ถึง 100% จะใช้เวลาทั้งหมดประมาณ 4 ถึง 5 นาที

■ เมื่อไฟระบุสถานะบนหน้าจอปิด

เมื่อไฟระบุสถานะปิด ให้ตรวจสอบว่าเกิดไฟฟ้าดับ แหล่งพลังงานถูกตัดด้วยสาเหตุอื่นๆ หรือไม่

■ การเปลี่ยนไส้กรองเป็นประจำ

การเปลี่ยนไส้กรองเป็นประจำนั้นสำคัญอย่างยิ่งกับความสะดวกของน้ำดื่ม การใช้ไส้กรองทั้งหมดอาจจะลดประสิทธิภาพการทำงานของเครื่องทำน้ำดื่ม ดังนั้นโปรดเปลี่ยนไส้กรองให้ตรงเวลา

■ เมื่อไม่ได้ใช้งานผลิตภัณฑ์มาเป็นเวลานาน

หากท่านเก็บน้ำไว้หรือไม่ได้ใช้ระบบเป็นเวลานาน ให้จ่ายน้ำร้อน 1 แก้ว แล้วจ่ายน้ำเย็นต่อเนื่องกันเป็นเวลา 3 นาทีก่อนใช้งาน

■ หลังจากเปิดผลิตภัณฑ์อีกครั้ง

หากเปิดผลิตภัณฑ์อีกครั้ง น้ำจะไหลออกมาจากท่อระบายน้ำ ซึ่งเป็นค่าตั้งต้นของการดึงน้ำร้อน กระบวนการนี้จะแสดงเป็น 0 ถึง 100% จะใช้เวลาทั้งหมดประมาณ 20 ถึง 30 วินาที




คำแนะนำ

- ปิดวาล์วน้ำประปาเมื่อจะไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน

ปุ่มและตัวชี้บอก

ตัวชี้บอก

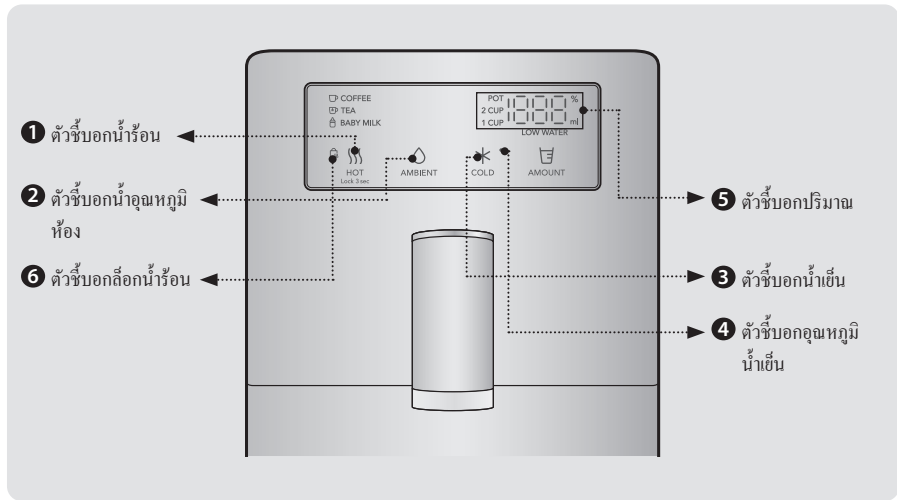

1 ตัวชี้บอกน้ำร้อน
ตัวชี้บอกนี้จะสว่างขึ้นเมื่อเลือกน้ำร้อน



2 ตัวชี้บอกน้ำอุณหภูมิห้อง
ตัวชี้บอกนี้จะสว่างขึ้นเมื่อเลือกน้ำอุณหภูมิห้อง



3 ตัวชี้บอกน้ำเย็น
ตัวชี้บอกนี้จะสว่างขึ้นเมื่อเลือกน้ำเย็น



4 ตัวชี้บอกอุณหภูมิ น้ำเย็น
ตัวชี้บอกจะสว่างขึ้นตามอุณหภูมิของน้ำเย็น เมื่อตัวชี้บอกเป็นสีฟ้า น้ำจะเย็นในระดับสูงสุด




5 ตัวชี้บอกปริมาณ
ปริมาณน้ำที่เลือกไว้จะแสดงขึ้น
* 4 ขั้นตอน (1 ถ้วย 250 มล. / 2 ถ้วย 500 มล. / หม้อ 1,000 มล. / ปลดน้ำดื่มเนื่อง (CON)



6 ตัวชี้บอกล็อกน้ำร้อน
ตัวชี้บอกนี้จะสว่างขึ้นเมื่อเลือกโหมดล็อกน้ำร้อน เมื่อเลือกฟังก์ชันล็อกทั้งหมด ตัวชี้บอกนี้จะสว่างขึ้นเช่นกัน

ปุ่มและตัวชี้บอก

ตัวชี้บอก

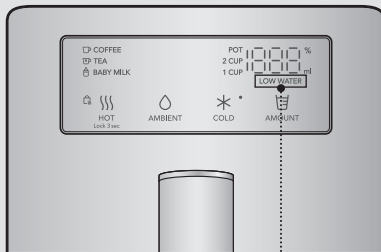


7 ตัวชี้บอกระดับน้ำต่ำ

LOW WATER

7 ตัวชี้บอกระดับน้ำต่ำ

ตัวชี้บอกระดับน้ำต่ำจะสว่างขึ้นเมื่อแรงดันน้ำต่ำหรืออัตราการไหลต่ำ

- * หาก ตัวชี้บอกนี้สว่างขึ้นระหว่างการจ่ายน้ำร้อน การจ่ายน้ำจะหยุดทันที และจะไม่สามารถจ่ายน้ำร้อนได้เป็นเวลา 10 วินาที
- * หาก ตัวชี้บอกนี้สว่างขึ้นระหว่างการจ่ายน้ำอุณหภูมิห้องหรือน้ำเย็น การจ่ายน้ำจะไม่หยุด (ปฏิบัติตามข้อกำหนดในการติดตั้งและรอบการเปลี่ยนไส้กรอง)

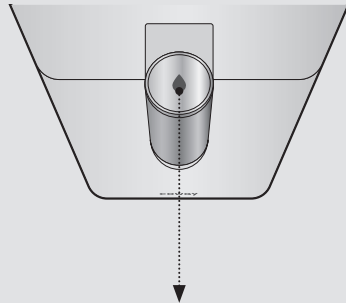


8 ตัวชี้บอกการจ่ายน้ำ



8 ตัวชี้บอกการจ่ายน้ำ

ตัวชี้บอกนี้จะสว่างขึ้นเมื่อกำลังจ่ายน้ำ

ปุ่ม

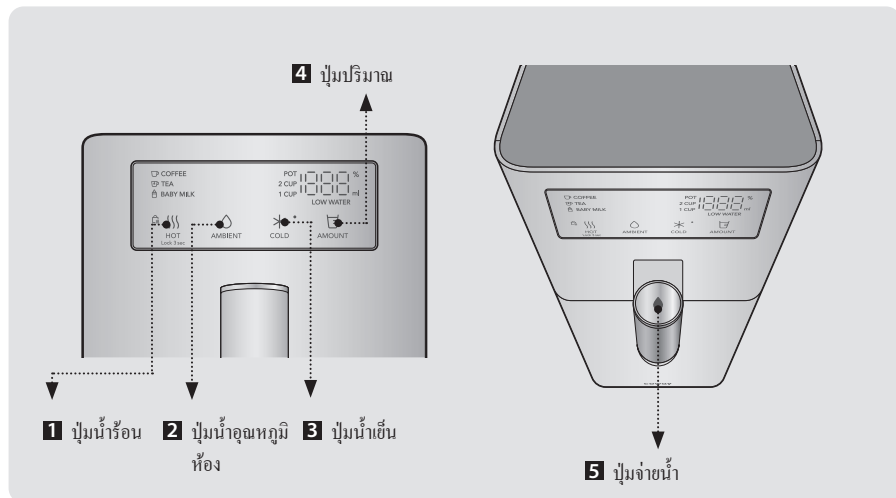

- 1 ปุ่มน้ำร้อน 2 ปุ่มน้ำอุณหภูมิห้อง 3 ปุ่มน้ำเย็น

- 5 ปุ่มจ่ายน้ำ



HOT
Lock 3 sec

1 ปุ่มน้ำร้อน

ใช้เมื่อท่านต้องการจ่ายน้ำร้อน แต่ละครั้ง
ที่ท่านกดปุ่มนี้ ท่านสามารถตั้งอุณหภูมิ
น้ำร้อน (กาแฟ ชา นมเด็กอ่อน)



AMBIENT

2 ปุ่มน้ำอุณหภูมิห้อง

ใช้เมื่อท่านต้องการจ่ายน้ำอุณหภูมิ
ห้อง



COLD

3 ปุ่มน้ำเย็น

ใช้เมื่อท่านต้องการจ่ายน้ำเย็น



AMOUNT

4 ปุ่มปริมาณ

ใช้เมื่อท่านต้องการเลือกปริมาณน้ำที่
จ่าย

* 1 ถ้วย 250 มล. / 2 ถ้วย 500 มล.
./ หม้อ 1,000 มล. / ต่อเนื่อง (จ่าย
น้ำอย่างต่อเนื่อง) จะถูกเลือกตาม
ลำดับ



5 ปุ่มจ่ายน้ำ


ใช้เมื่อท่านต้องการจ่ายน้ำ

ปุ่มและตัวชี้บอก

■ หากต้องการใช้ฟังก์ชันกำหนดปริมาณการจ่ายน้ำ

ท่านสามารถระบุที่ปุ่มกำหนดปริมาณซ้ำๆ เพื่อสลับ 4 ตัวเลือก : 1 ถ้วย (250 มล.), 2 ถ้วย (500 มล.), หม้อ (1,000 มล.) และ ค่อยเนื่อง (จ่ายน้ำอย่างค่อยเป็นค่อยไป ประมาณ 3 นาที)


- * ระหว่างการจ่ายน้ำ กดปุ่มจ่ายน้ำอีกครั้งเพื่อหยุดการจ่ายน้ำ
- * ค่าตั้งต้นนั้นตั้งไปที่ 1 ถ้วย หากท่านต้องการเปลี่ยนค่าตั้งต้นดังกล่าว ให้กดปุ่มปริมาณการจ่ายน้ำค้างไว้ 3 วินาที (ไม่สามารถตั้งการจ่ายน้ำอย่างค่อยเป็นค่อยไป ค่าตั้งต้น)

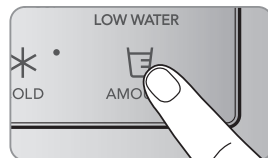

■ การใช้ฟังก์ชันน้ำเย็น

ในสภาวะเริ่มแรก ฟังก์ชันน้ำเย็นจะถูกตั้งไว้ (ตัวชี้บอกอุณหภูมิน้ำเย็นจะสว่าง)


- * เมื่อการทำความเย็นเสร็จสิ้นแล้ว ตัวชี้บอก อุณหภูมิน้ำเย็นจะเปลี่ยนจากสีฟ้า เป็นสีฟ้า (จะใช้เวลาประมาณ 2-3 ชั่วโมง โดยขึ้นอยู่กับอุณหภูมิภายนอก)
- * ในการปิดฟังก์ชันน้ำเย็น ให้กดปุ่มน้ำเย็นค้างไว้อย่างน้อย 5 วินาที (ตัวชี้บอก อุณหภูมิน้ำเย็น : ปิด)
- * ในการเปิดฟังก์ชันน้ำเย็นอีกครั้ง ให้กดปุ่มน้ำเย็นค้างไว้ประมาณ 2 วินาที (ตัวชี้บอกอุณหภูมิน้ำเย็น : เปิด)
- * เพื่อรักษาประสิทธิภาพในการทำความเย็น ควรถอดตะแกรงที่ด้านหลังของ ผลิตภัณฑ์มาทำความสะอาดเป็นระยะๆ (ทุกๆ 2-4 เดือน)

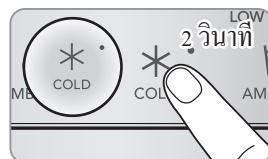

■ การใช้ฟังก์ชันน้ำร้อน

กดปุ่มน้ำร้อน และตรวจสอบว่าตัวชี้บอกน้ำร้อนเปิดขึ้นหรือไม่

- * เมื่อทำการจ่ายน้ำร้อน โปรดใช้ความระมัดระวังเพื่อหลีกเลี่ยงการถูกน้ำร้อนลวก
- * อาจมีความล่าช้าเล็กน้อยในการทำให้น้ำร้อนถึงอุณหภูมิที่ต้องการ
- * ในขณะที่จ่ายน้ำ ปริมาณน้ำที่จ่ายจะแสดงขึ้น และอาจเกิดเสียงการทำความร้อน
- * การใช้ น้ำร้อนมากเกินไปจะจำกัดการใช้งานน้ำร้อนเพื่อป้องกันผลิตภัณฑ์ (หากใช้งาน 7 นาที หรือนานกว่า 10 นาที น้ำร้อนจะหยุดทำงาน 5 นาที)
- * ทุกครั้งที่เปิดพลังงาน การล้างตัวชี้บอกน้ำร้อนจะทำงาน โดยอัตโนมัติประมาณ 30 วินาที (ความเค็มหน้าจะแสดงเป็น 0 ถึง 100%)

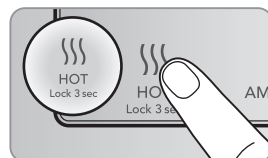

■ การใช้ฟังก์ชันปิดเสียง


หากท่านแตะที่ปุ่มน้ำอุณหภูมิห้องและปุ่มกำหนดปริมาณค้างไว้นานกว่า 2 วินาที ฟังก์ชันปิดเสียงจะเปิดทำงาน เมื่อเปิดฟังก์ชันปิดเสียง เสียงแจ้งเตือนจะไม่ดังเมื่อท่านแตะปุ่มทั้งหมด และเมื่อเสร็จสิ้นการจ่ายน้ำ และเมื่อเปลี่ยนไปใช้การจ่ายน้ำอย่างต่อเนื่อง

- * ยกเลิกฟังก์ชันปิดเสียงได้โดยการแตะที่ปุ่มน้ำอุณหภูมิห้องและปุ่มกำหนดปริมาณค้างไว้นานกว่า 2 วินาที



■ การใช้ฟังก์ชันล๊อคน้ำร้อน


กดปุ่มน้ำร้อนค้างไว้นานกว่า 3 วินาที เพื่อเปิดเสียงการตั้งค่าและเปิดไฟ LED การล๊อก ในการปิดฟังก์ชันล๊อคน้ำร้อน ให้กดปุ่มน้ำร้อนค้างไว้นานกว่า 3 วินาที

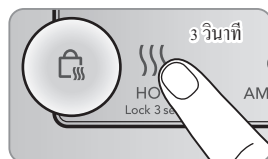

■ การใช้ฟังก์ชันล๊อกทั้งหมด

กดปุ่มน้ำร้อนและปุ่มน้ำอุณหภูมิห้องพร้อมกันค้างไว้ประมาณ 2 วินาที เพื่อล๊อกฟังก์ชันทั้งหมด ในการปิดฟังก์ชันล๊อกทั้งหมด ให้กดปุ่มน้ำร้อนและปุ่มน้ำอุณหภูมิห้องพร้อมกันค้างไว้ประมาณ 2 วินาที


- * เมื่อเปิดฟังก์ชันล๊อกทั้งหมด ตัวขับเคลื่อนทั้งหมดจะปิดและตัวขับเคลื่อนน้ำร้อนเท่านั้นที่จะสว่าง
- * หากท่านเปิดฟังก์ชันล๊อกทั้งหมดแล้วคลิกในขณะที่กำลังใช้ฟังก์ชันล๊อกน้ำร้อน ฟังก์ชันล๊อกน้ำร้อนจะยังคงทำงานอยู่ และปุ่มล๊อกจะสว่าง

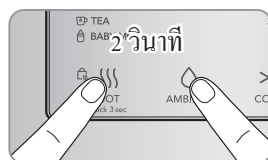

■ การเปิด/ปิดไฟ LED การจ่ายน้ำขณะสแตนด์บาย

กดปุ่มน้ำอุณหภูมิห้องค้างไว้นานกว่า 5 วินาที เพื่อปิดไฟ LED การจ่ายน้ำ ในการปิดฟังก์ชันล๊อคน้ำร้อน ให้กดปุ่มน้ำร้อนค้างไว้นานกว่า 2 วินาที

- * หากไฟ LED การจ่ายน้ำปิดอยู่ ไฟ LED การจ่ายน้ำจะเปิดระหว่างการจัดน้ำ

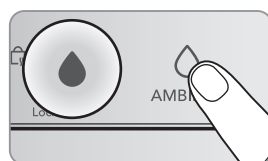

วิธีกดน้ำดื่มที่ต้องการ

วิธีกดน้ำร้อน

- วิธีการกำหนดปริมาณการจ่ายน้ำ


แตะที่ปุ่มน้ำร้อนแล้วเลือกปริมาณการจ่ายน้ำที่ต้องการด้วยปุ่มปริมาณ กดปุ่มจ่ายน้ำ และน้ำร้อนจะถูกจ่ายตามปริมาณที่เลือกไว้ ในขณะที่จ่ายน้ำ หากท่านกดปุ่มจ่ายน้ำอีกครั้ง การจ่ายน้ำจะหยุดลง (สามารถเลือก 250 มล., 500 มล., 1,000 มล. และการจ่ายน้ำอย่างต่อเนื่องได้ตามลำดับ)

- วิธีการจ่ายน้ำอย่างต่อเนื่อง

กดปุ่มจ่ายน้ำหลังจากที่หน้าจอปริมาณการจ่ายน้ำเปลี่ยนเป็น Con โดยการกดปุ่มกำหนดปริมาณการจ่ายน้ำหรือกดปุ่มจ่ายน้ำค้างไว้ 2 วินาที หรือนานกว่านั้น น้ำจะถูกจ่ายอย่างต่อเนื่องประมาณ 3 นาที ขณะที่จ่ายน้ำ หากท่านกดปุ่มจ่ายน้ำอีกครั้ง การจ่ายน้ำจะหยุดลง

- วิธีการเลือกอุณหภูมิน้ำร้อน

เลือก อุณหภูมิที่ต้องการด้วยปุ่มน้ำร้อน (สามารถเลือกกาแฟ น้ำชา และนมเด็กอ่อน ได้ตามลำดับ)

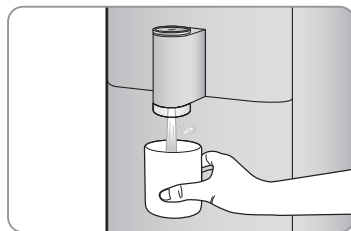

คำแนะนำ

- ทุกครั้งที่เปิดหลังงาน การล้างด้วยน้ำร้อนจะทำงานโดยอัตโนมัติประมาณ 30 วินาที (ความถี่หน้าจะแสดงเป็น 0 ถึง 100% หากการล้างหยุดระหว่างการทำงาน จะต้องเริ่มต้นกระบวนการนี้ใหม่ตั้งแต่แรก)
- การใช้น้ำร้อนมากเกินไปจะจำกัดการใช้งานน้ำร้อนเพื่อปกป้องผลิตภัณฑ์ (หากใช้งาน 7 นาที หรือนานกว่า 10 นาที น้ำร้อนจะหยุดทำงาน 5 นาที)
- เมื่อทำการจ่ายน้ำร้อน โปรดใช้ความระมัดระวังเพื่อหลีกเลี่ยงการถูกน้ำร้อนลวก
- เมื่อทำการจ่ายน้ำร้อน ให้น้ำด้วยไว้ใกล้ๆ กับก๊อกน้ำ เนื่องจากน้ำอาจกระเซ็น (อย่างเร็วก็ตาม สามารถใช้ส่วนขยายก๊อกน้ำเพื่อความสะดวก)
- เมื่อทำการจ่ายน้ำร้อน อาจมีความล่าช้าเล็กน้อยในการทำให้น้ำร้อนถึงอุณหภูมิที่ต้องการ
- ในขณะที่กำลังทำน้ำร้อน อาจมีเสียงน้ำเดือดดังขึ้น
- เพื่อป้องกันการถูกน้ำร้อนลวก ระบบจะเปลี่ยนไปที่โหมดน้ำเย็นหรือน้ำอุณหภูมิห้องโดยอัตโนมัติหากไม่ได้กดปุ่มภายในระยะเวลาหนึ่ง (ประมาณ 7 วินาที) หลังจากเลือกปุ่มน้ำร้อน (เมื่อฟังก์ชันน้ำเย็นปิดอยู่ สถานะจะเปลี่ยนเป็น น้ำอุณหภูมิห้อง)
- หากท่านได้ยินเสียงเตือนแต่ไม่มีน้ำร้อนไหลออกมา ให้ตรวจสอบไฟ LED กรอกรีส (ดูหน้า 14)
- เมื่อทำการจ่ายน้ำร้อน อาจเกิดหินปูน ได้ขึ้นอยู่กับสภาพและเงื่อนไขการใช้งาน หากท่านพบสารแปลกปลอมสีขาว โปรดติดต่อทาง ศูนย์บริการ ไบเวย์

* สารแปลกปลอมสีขาวคือคราบน้ำปูน ซึ่งเกิดจากเกิดความร้อนกับแร่ธาตุในน้ำ



วิธีการต้มน้ำดื่ม

- วิธีการกำหนดปริมาณการจ่ายน้ำ

แต่ที่ปุ่มน้ำอุณหภูมิห้องแล้วเลือกปริมาณการจ่ายน้ำที่ต้องการด้วยปุ่มปริมาณ กดปุ่มจ่ายน้ำ และน้ำอุณหภูมิห้องจะถูกจ่ายตามปริมาณที่เลือกไว้ในขณะที่จ่ายน้ำ หากท่านกดปุ่มจ่ายน้ำอีกครั้ง การจ่ายน้ำจะหยุดลง (สามารถเลือก 250 มล., 500 มล., 1,000 มล. และการจ่ายน้ำอย่างต่อเนื่องได้ตามลำดับ)

- วิธีการจ่ายน้ำอย่างต่อเนื่อง

กดปุ่มจ่ายน้ำหลังจากที่หน้าจอปริมาณการจ่ายน้ำเปลี่ยนเป็น Con โดยการกดปุ่มกำหนดปริมาณการจ่ายน้ำหรือกดปุ่มจ่ายน้ำค้างไว้ 2 วินาที หรือนานกว่านั้น ขณะที่จ่ายน้ำ หากท่านกดปุ่มจ่ายน้ำอีกครั้ง การจ่ายน้ำจะหยุดลง

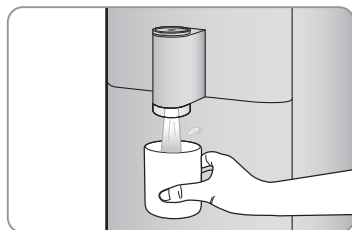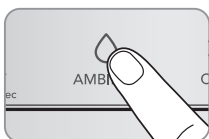



วิธีการต้มน้ำ

- วิธีการกำหนดปริมาณการจ่ายน้ำ

หลังจากตรวจสอบตัวจับอุณหภูมิน้ำเย็นแล้ว ให้แตะปุ่มน้ำเย็น แล้วกดปุ่มปริมาณเพื่อเลือกปริมาณการจ่ายน้ำที่ต้องการ กดปุ่มจ่ายน้ำ และน้ำเย็นจะถูกจ่ายตามปริมาณที่เลือกไว้ในขณะที่จ่ายน้ำ หากท่านกดปุ่มจ่ายน้ำอีกครั้ง การจ่ายน้ำจะหยุดลง (สามารถเลือก 250 มล., 500 มล., 1,000 มล. และการจ่ายน้ำอย่างต่อเนื่องได้ตามลำดับ)

- วิธีการจ่ายน้ำอย่างต่อเนื่อง

กดปุ่มจ่ายน้ำหลังจากที่หน้าจอปริมาณการจ่ายน้ำเปลี่ยนเป็น Con โดยการกดปุ่มกำหนดปริมาณการจ่ายน้ำหรือกดปุ่มจ่ายน้ำค้างไว้ 2 วินาที หรือนานกว่านั้น เพื่อการจ่ายน้ำอย่างต่อเนื่อง ขณะที่จ่ายน้ำ หากท่านกดปุ่มจ่ายน้ำอีกครั้ง การจ่ายน้ำจะหยุดลง

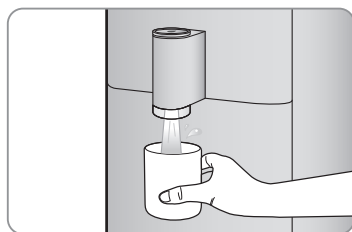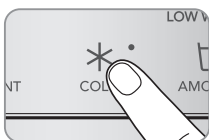


คำแนะนำ

- น้ำไม่มีน้ำเย็นไหลออกมา โปรดตรวจสอบว่าตัวจับอุณหภูมิน้ำเย็นบนหน้าจอเปิดอยู่หรือไม่ (ดูหน้า 13)


วิธีติดตั้ง

คำแนะนำการติดตั้ง

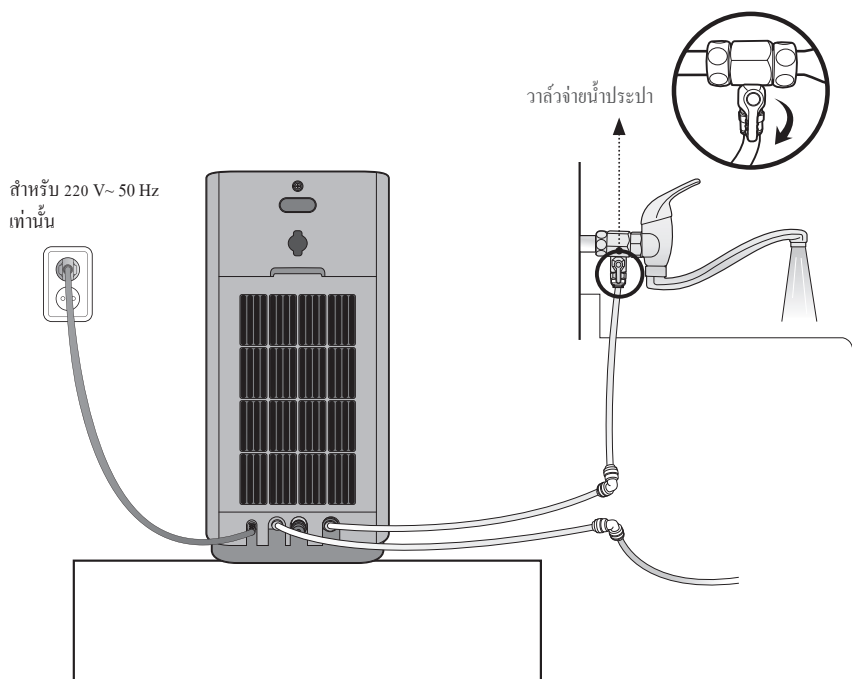


ต่อท่อสีส้มสำหรับท่อจ่ายน้ำประปา ❶ เข้ากับท่อน้ำประปา ต่อข้อต่อระบายน้ำ ❷. (น้ำเย็นออก ❸)

ช่องเข้า : ท่อจ่ายน้ำประปาเข้า (สีส้ม) ←
ช่องระบายน้ำเย็น : ฟัดจ์ ←
ช่องระบายน้ำร้อน : ข้อต่อระบายน้ำ (สีเทา) ←

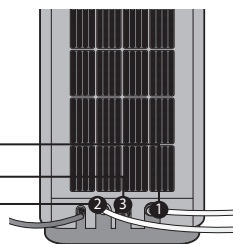

► สภาพน้ำจ่ายเข้า : 20 psi, 3 LPM หรือสูงกว่า

คำแนะนำการติดตั้ง

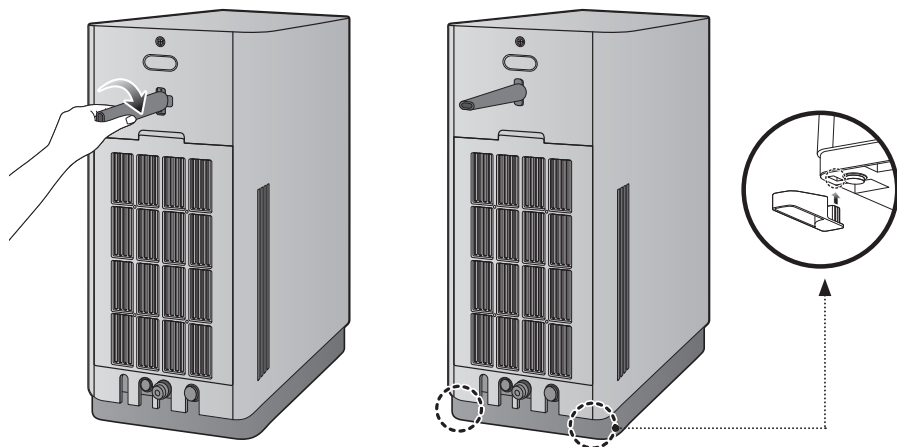

คำแนะนำ

⚠ หากไม่ได้ติดตั้งส่วนประกอบด้านบนนี้ อาจจะมีผลกระทบกับประสิทธิภาพการทำความเย็น

วิธีติดตั้ง

ข้อควรระวัง

⚠ สถานที่สำหรับติดตั้งเครื่องทำน้ำดื่ม

หลีกเลี่ยงการติดตั้งเครื่องทำน้ำดื่มในบริเวณที่พื้น ไม่เรียบ มีความชื้นสูง ได้รับแสงแดดอย่างรุนแรง มีฝุ่นปริมาณสูงมาก และบริเวณที่โดนน้ำ ฯลฯ

⚠ สถานที่สำหรับติดตั้งเครื่องทำน้ำดื่ม II

ตะแกรงหม้อน้ำที่ด้านหลังของผลิตภัณฑ์ควรห่างจากผนังอย่างน้อย 10 ซม. และควรดูให้แน่ใจว่าพื้นที่ติดตั้งนั้นแข็งแรง

⚠ ชุดท่อน้ำเย็น

ตรวจสอบให้แน่ใจว่าท่อเข้ากับท่อน้ำเย็น (หากคอกับท่อน้ำร้อน ใส่กรองอาจเสียหายได้)

⚠ หลังจากติดตั้ง (ขั้นตอนการล้าง)

หากผลิตภัณฑ์ถูกเปิด FL จะแสดงขึ้น เลือกปุ่มน้ำอุณหภูมิห้อง แล้วกดปุ่มจ่ายน้ำเพื่อปล่อยน้ำเข้าไส้กรอง

- เตรียมภาชนะขนาดใหญ่สำหรับรองรับน้ำระหว่างกระบวนการล้างไส้กรอง จะใช้เวลาประมาณ 3 นาที

- หลังจากล้างไส้กรองแล้ว อาจจะไม่สามารถจ่ายน้ำสักครู่หนึ่ง เนื่องจากเครื่องกำลังเติมน้ำในถังน้ำร้อนและถังน้ำเย็นให้เต็ม

- กระบวนการล้างจะแสดงเป็น 0 ถึง 100% จะใช้เวลาทั้งหมดประมาณ 4 ถึง 5 นาที ท่านสามารถหยุดกระบวนการนี้ชั่วคราวได้

- เมื่อปิดพลังงานระหว่างที่กำลังดำเนินการ ต้องทำการล้างใหม่อีกครั้งตั้งแต่นั้น

(* หลังจากการล้าง อาจมีน้ำไหลออกมาจากถ้อยน้ำประมาณ 10 นาทีระหว่างกระบวนการทำน้ำเย็น)

⚠ หลังจากเปิดผลิตภัณฑ์อีกครั้ง (การล้างด้วยน้ำร้อนอัตโนมัติ)

หากเปิดผลิตภัณฑ์อีกครั้ง การล้างด้วยน้ำร้อนจะทำงานโดยอัตโนมัติ

- จะใช้เวลาประมาณ 30 วินาที กระบวนการนี้จะแสดงเป็น 0 ถึง 100 %

- ไม่สามารถหยุดกระบวนการนี้ระหว่างการทำงาน



คำแนะนำ


- ⚠ วาล์วอาจเกิดการสันสะเทือนเมื่อใช้งานเครื่องทำน้ำดื่มครั้งแรก ซึ่งอาการนี้จะหายไปตามธรรมชาติ
- ⚠ อาจมีน้ำที่ใช้ในการตรวจสอบหลังการผลิตค้างอยู่ในไส้กรอง โปรดอย่าตกใจ นี่ไม่ใช่ผลิตภัณฑ์ให้แล้ว
- ⚠ อย่าใช้วาล์วน้ำและท่อเก่าสำหรับติดตั้งเครื่องทำน้ำดื่ม

วิธีทำความสะอาด

วิธีทำความสะอาดภาค


1. วิธีถอดถาด

สามารถถอดด้านหน้าของถาดรองได้อย่างง่ายดายโดยการยกขึ้นเล็กน้อย ถอดถาดออก แล้วใช้ผ้าเช็ดภายในและภายนอก

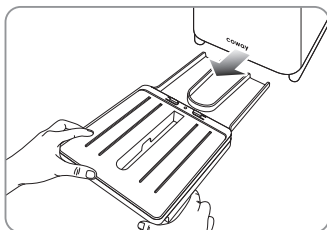

2. วิธีประกอบถาด


เลื่อนถาดเข้าที่ด้านล่างของผลิตภัณฑ์ แล้วใส่ฝาครอบเข้าที่

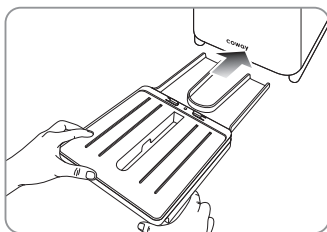

วิธีทำความสะอาดตัวผลิตภัณฑ์ (ทุกๆ 2~4 สัปดาห์)

ใช้ผ้าสะอาดเช็ดผลิตภัณฑ์

* หากมีฝุ่นหนา ให้ใช้ผ้าเปียกเช็ด (อย่าใช้วัสดุผงขัด)

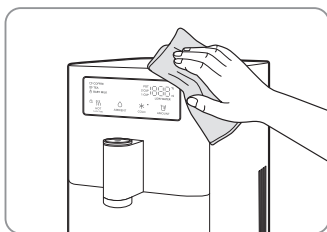

คำแนะนำ

- อย่าฉีดน้ำบนตัวผลิตภัณฑ์โดยตรงเพื่อทำความสะอาด
- อย่าใช้ทินเนอร์ เบนซิน หรือสารทำความสะอาดที่มีวัสดุผงขัด หรือผ้าหยาบในการทำความสะอาด



วิธีทำความสะอาด

วิธีทำความสะอาดก๊อกน้ำ

1. ถอดก๊อกน้ำโดยการหมุนตามเข็มนาฬิกา

* ก๊อกน้ำประกอบด้วยสองชิ้นส่วน


* ถอดปลายก๊อกน้ำด้านในลงล่าง

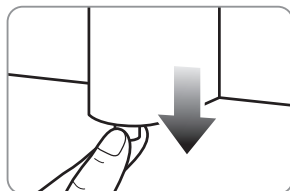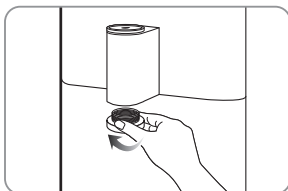



2. ล้างก๊อกน้ำด้วยน้ำ



3. หลังจากล้างแล้ว ให้เช็ดก๊อกน้ำด้วยผ้าที่นุ่มและแห้ง

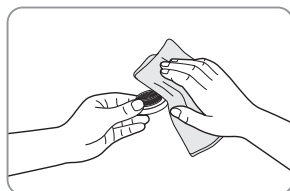


4. ประกอบก๊อกน้ำโดยการหมุนทวนเข็มนาฬิกา

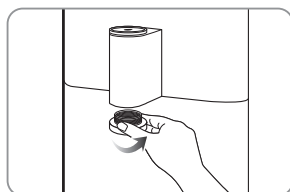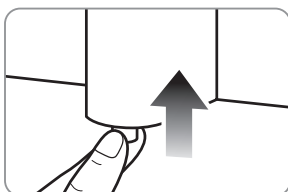



วิธีการระบายน้ำออกจากถังเก็บน้ำภายใน

1. ปิดวาล์วจ่ายน้ำประปา

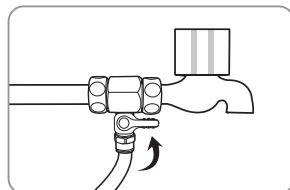


2. ถอดฝาปิดช่องระบายน้ำเย็นที่ด้านหลังของผลิตภัณฑ์เพื่อระบายน้ำออกจากถังน้ำเย็น


* หากท่านถอดฝาปิดช่องระบายน้ำเย็น น้ำเย็นจะระบายออกทันที ดังนั้นจึงควรเตรียมภาชนะสำหรับรองน้ำเย็นไว้

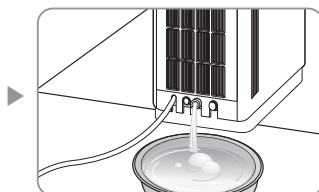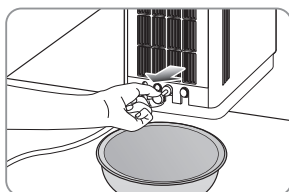

3. ใส่ฝาปิดช่องระบายน้ำเย็น

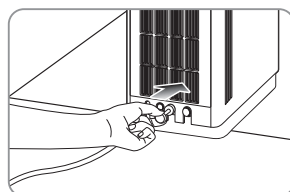

4. เปิดวาล์วจ่ายน้ำประปา

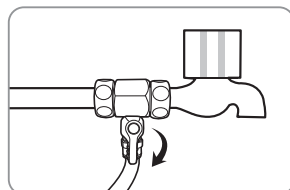

5. เลือกน้ำเย็นแล้วจ่ายน้ำประมาณ 3 นาที

* หลังจากเติมน้ำในถังแล้ว อาจมีน้ำไหลออกมาจากก๊อกน้ำประมาณ 5~10 นาทีระหว่างกระบวนการทำน้ำเย็น





วิธีทำความสะอาด

วิธีทำความสะอาดตะแกรงหลัง



1. วิธีถอดตะแกรงหลัง

สอดนิ้วเข้าไปในร่องด้านบนของตะแกรง แล้วดึงออกเพื่อถอด ทำความสะอาดตะแกรงด้วยผ้าและน้ำ

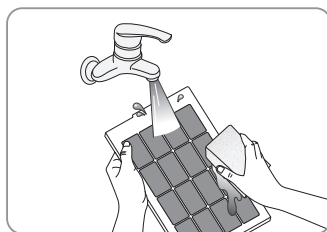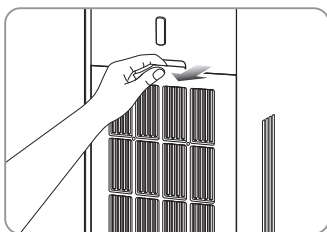

2. วิธีประกอบตะแกรงหลัง

ใส่ตะแกรงเข้าไปในร่องด้านล่างของผลิตภัณฑ์ แล้วดันตะแกรงเข้าหาผลิตภัณฑ์

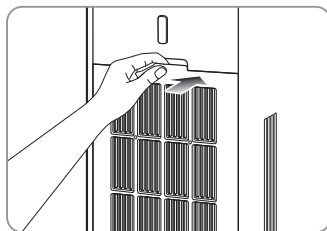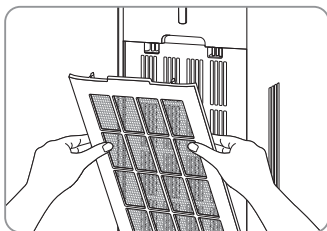

การเปลี่ยนไส้กรอง

■ รอบการเปลี่ยนไส้กรอง

การไม่เปลี่ยนไส้กรองเป็นประจำอาจทำให้คุณภาพน้ำจากผลิตภัณฑ์ลดลง รอบการเปลี่ยนไส้กรองอาจแตกต่างกันไปจากรอบการเปลี่ยนไส้กรองตามปกติโดยขึ้นอยู่กับคุณภาพน้ำที่ป้อนเข้าไปในเครื่อง



คำแนะนำ

ระยะเวลาการเปลี่ยนไส้กรองนั้นคำนวณโดยการประมาณการใช้งาน 10 ลิ. ต่อวันสำหรับสมาชิกครอบครัว 4 คน

CHP-6200N



ชื่อไส้กรอง	ระยะเวลาเปลี่ยนที่คาดไว้
ไส้กรอง Nanotrap™	4 เดือน
ไส้กรอง Plus Inno-Sense(D)	4 เดือน

วิธีเปลี่ยนไส้กรอง


เปลี่ยนไส้กรอง

1. ถอดก๊อกน้ำโดยการหมุนตามเข็มนาฬิกา



- * ก๊อกน้ำประกอบด้วยสองชิ้นส่วน
- * ถอดปลายก๊อกน้ำด้านในลงล่าง
- * ระวังอย่าทำชิ้นส่วนของก๊อกน้ำที่ถอดออกหาย

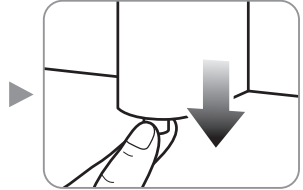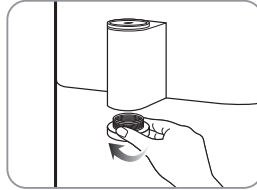


2. ถอดฝาครอบไส้กรองที่ด้านหน้า

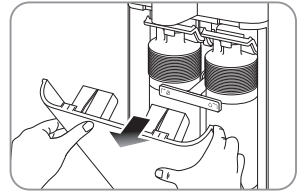



3. ปิดวาล์วน้ำประปา (หมุน 90 องศาตามทิศทางการปิด)

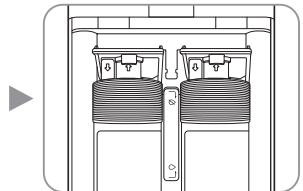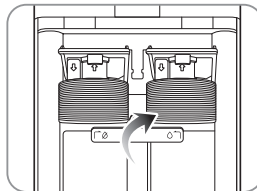


4. กดปุ่มจ่ายน้ำเพื่อระบายน้ำที่ตกค้าง

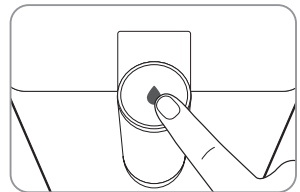



5. โปรตถอดไส้กรองออกโดยการยกที่ตัวจับไส้กรอง

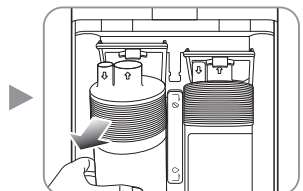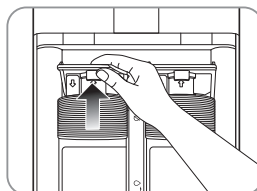


6. ใส่ไส้กรองอันใหม่ตามลำดับของไส้กรองที่ถูกต้อง

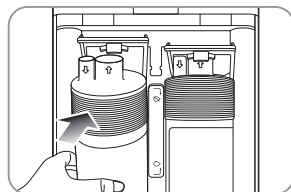



7. ตรวจสอบว่าตัวยึดไส้กรองเลื่อนลงมาเข้าที่อย่างแน่นหนา จากนั้นให้เปิดวาล์วน้ำประปา (หมุน 90 องศาตามทิศทางการเปิด)

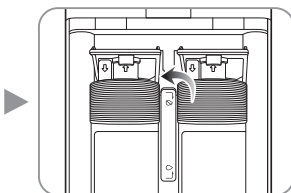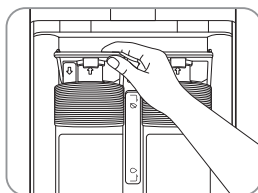


8. ปิดฝาครอบไส้กรองที่ด้านหน้า

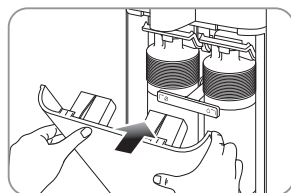

9. ประกอบก๊อกน้ำโดยการหมุนทวนเข็มนาฬิกา

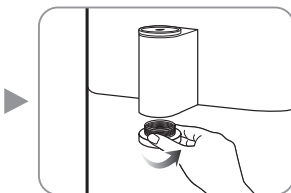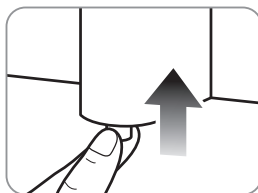

10. เลือกน้ำอุณหภูมิห้อง แล้วจ่ายน้ำประมาณ 3 นาทีเพื่อล้างไส้กรอง

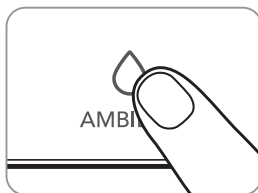

คำแนะนำ

สำหรับฟิตติ้ง ท่อ และก๊อกน้ำที่ใช้งานมานานกว่า 5 ปี โปรดติดต่อศูนย์บริการ และเราจะเปลี่ยนชิ้นส่วนใหม่ให้ (อาจมีค่าใช้จ่ายในการเปลี่ยนชิ้นส่วน)

การแก้ไขปัญหา

เครื่องกรองน้ำอาจทำงานผิดปกติเพราะว่าผู้ใช้ไม่คุ้นเคยกับผลิตภัณฑ์หรือเนื่องจากสาเหตุอื่น แต่ไม่ใช่เพราะว่าผลิตภัณฑ์ทำงานผิดพลาด ในกรณีดังกล่าวก็สามารถแก้ปัญหาได้อย่างง่ายดายโดยไม่ต้องขอความช่วยเหลือจากศูนย์บริการ โดยการตรวจสอบดังต่อไปนี้ หากปัญหายังไม่ได้รับการแก้ไขหลังจากตรวจสอบตามรายการต่อไปนี้แล้ว โปรดโทรติดต่อศูนย์บริการ

อาการ	ตรวจสอบ	วิธีการแก้ไข
น้ำมีรสชาติแปลกๆ	• ถึงเวลาเปลี่ยนไส้กรองแล้วหรือไม่	โปรดแจ้งขอให้เปลี่ยนไส้กรอง
ไม่มีน้ำจ่ายออกมา	• อุปกรณ์ไม่เชื่อมต่อกับแหล่งจ่ายน้ำ หรือวาล์วจ่ายน้ำประปาปิดอยู่หรือไม่	เปิดวาล์วจ่ายน้ำประปา
	• ทานลิ้มรสชาติเวลาการเปลี่ยนไส้กรองหรือไม่	โปรดแจ้งขอให้เปลี่ยนไส้กรอง
ปริมาณน้ำกรองมีน้อยกว่าแต่ก่อนมาก	• ถึงเวลาเปลี่ยนไส้กรองแล้วหรือไม่	โปรดแจ้งขอให้เปลี่ยนไส้กรอง
	• เสียบปลั๊กอยู่หรือไม่	ตรวจสอบว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~ 50 Hz หรือไม่
	• วาล์วจ่ายน้ำประปาปิดอยู่หรือไม่	เปิดวาล์วจ่ายน้ำประปา
น้ำเย็นไม่จ่ายออกมา	• ตัวจับออกอุณหภูมิน้ำเย็นเปิดอยู่หรือไม่	กดปุ่มน้ำเย็นค้างไว้ 2 วินาที เพื่อเปิดฟังก์ชันน้ำเย็น
	• ดูเหมือนว่าอุปกรณ์ทำความเย็นไม่ทำงาน	โปรดติดต่อขอรับบริการซ่อมแซม
	• เสียบปลั๊กอยู่หรือไม่	ตรวจสอบว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~ 50 Hz หรือไม่
	• วาล์วจ่ายน้ำประปาปิดอยู่หรือไม่	โปรดเปิดวาล์วจ่ายน้ำประปา
	• ผลิตภัณฑ์อาจอยู่กับผงหินไปหรือไม่	ตั้งผลิตภัณฑ์ให้อยู่ห่างจากผนังอย่างน้อย 10 ซม.
น้ำร้อนไม่จ่ายออกมา	• ตัวจับบอกสื่อน้ำร้อนเปิดอยู่หรือไม่	ปิดฟังก์ชันสื่อน้ำร้อน
	• วาล์วจ่ายน้ำประปาปิดอยู่หรือไม่	เปิดวาล์วจ่ายน้ำประปา
	• เสียบปลั๊กอยู่หรือไม่	ตรวจสอบว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~ 50 Hz หรือไม่
	• มีน้ำร้อนรั่วไหลหรือเงินนองหรือไม่	โปรดติดต่อขอรับบริการซ่อมแซม
	• เมื่อท่านเลือกการจ่ายน้ำร้อน ท่านได้ยินเสียงเตือนและน้ำไม่จ่ายออกมาหรือไม่	นี่คือฟังก์ชันปิด โดยอัตโนมัติเพื่อป้องกันมิให้อุปกรณ์ทำความร้อนภายในผลิตภัณฑ์มีความร้อนสูงเกินไป หลังจากครั้งหนึ่ง ท่านจะสามารถจ่ายน้ำร้อนได้อีกครั้ง
	• เมื่อเลือกน้ำร้อน 'Hot' จะแสดงขึ้นและจะมีเสียงแจ้งเตือน	
น้ำไม่ไหลออกมาหรือปริมาณน้ำที่ระบายแตกต่างจากแต่ก่อน	• ถึงเวลาเปลี่ยนฟิลเตอร์แล้วหรือไม่	โปรดแจ้งขอให้เปลี่ยนฟิลเตอร์
	• อุปกรณ์ไม่เชื่อมต่อกับแหล่งจ่ายน้ำ หรือวาล์วจ่ายน้ำประปาปิดอยู่หรือไม่	เปิดวาล์วจ่ายน้ำประปา
	• ท่อพับหรือถูกตัดหรือไม่	คลายท่อออกอย่างถูกต้อง
น้ำรั่ว	• มีน้ำไหลจากข้างในผลิตภัณฑ์หรือไม่	หลังจากเปิดวาล์วจ่ายน้ำประปาแล้ว ให้แจ้งขอรับบริการซ่อมบำรุง
อุปกรณ์หยุดทำงานอย่างฉับพลัน	• แหล่งจ่ายน้ำปกติคืออยู่หรือไม่	โปรดตรวจสอบวาล์วจ่ายน้ำประปา
	• เสียบปลั๊กอยู่หรือไม่	ตรวจสอบว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V~ 50 Hz หรือไม่
	• มีน้ำกรองรั่วไหลหรือเงินนองหรือไม่	โปรดติดต่อขอรับบริการซ่อมแซม

ข้อมูลจำเพาะ:


ชื่อผลิตภัณฑ์		เครื่องกรองน้ำ Coway
ชื่อรุ่น		CHP-6200N
วิธีการกรองน้ำ		วิธีการดูดซับไฟฟ้าสถิต
อัตราแรงดันไฟฟ้า		220 V~ 50 Hz
การใช้พลังงาน		เย็น : 0.5 A, ความร้อน: 2720 W, รวม : 2730 W
รายละเอียดของตัวขับเคลื่อน		หน้าจอลดอุณหภูมิ น้ำ ฟังก์ชันล็อก
ฟังก์ชันหลัก		น้ำอุณหภูมิห้อง น้ำเย็น น้ำร้อน การป้องกันความร้อนสูงเกินไป การกำหนดปริมาณการจ่ายน้ำ การจ่ายน้ำอย่างต่อเนื่อง
ความจุของถังน้ำ	น้ำเย็น	1.35 ลิ.
	น้ำร้อน	วิธีการทำน้ำร้อนทันที
	น้ำอุณหภูมิห้อง	ประเภทกรองน้ำโดยตรง
	รวม	1.35 ลิ.
วัสดุไส้กรอง	ไส้กรอง Nanotrap™	โบฮีไมด์ พอลิโพรไพลีน เซลลูโลส
	ไส้กรอง Plus Inno-Sense(D)	ก๊อนแอกทีฟคาร์บอน กำมะหยี่
ขนาดผลิตภัณฑ์		180 มม. (กว้าง) x 440 มม. (ลึก) x 422 มม. (สูง)
อุณหภูมิน้ำประปา		5 °C - 35 °C
อุณหภูมิการทำงาน		5 °C - 35 °C
แรงดันการทำงาน (น้ำประปา)		138 kPa – 827 kPa (20 psi ~ 120 psi) ปริมาณการไหลขั้นต่ำของน้ำประปา 3.0 L/min

- ▶ ความจุของถังน้ำขึ้นอยู่กับขนาดของถังน้ำ และอาจแตกต่างจากปริมาณการจ่ายน้ำ
- ▶ การออกแบบและข้อมูลจำเพาะของผลิตภัณฑ์นั้นขึ้นอยู่กับข้อกำหนดของกฎหมาย และอาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า เพื่อปรับปรุงผลิตภัณฑ์และคุณภาพของผลิตภัณฑ์

ประเทศไทย
ที่อยู่ : บริษัท โคเวย์ (ประเทศไทย) จำกัด 75/104-106 อาคาร โอเชียนทาวเวอร์ 2 ชั้น 38 ซอยสุขุมวิท 19 (วัฒนา) ถนนสุขุมวิท คลองเตยเหนือ วัฒนา กรุงเทพฯ 10110 คอลเซ็นเตอร์ : 1421

แผนภาพการไหลของน้ำ

CHP-6200N

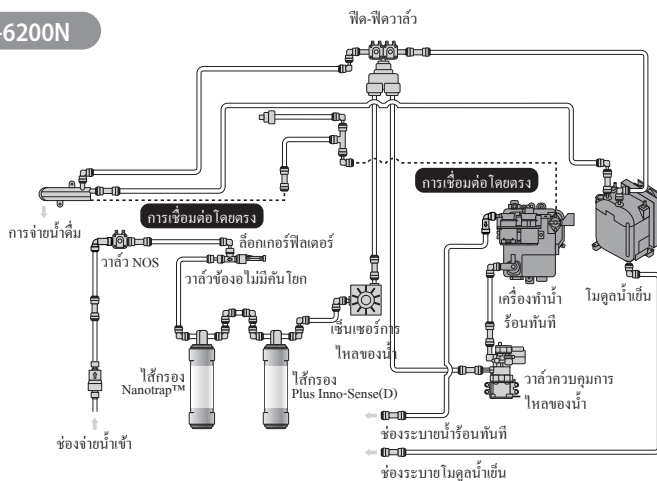

บันทึก

////////////////////////////////////

บันทึก

////////////////////////////////////

บันทึก

////////////////////////////////////

coway
www.coway.com